



KITAGAWA

GAS DETECTOR TUBE SYSTEM

*An Hygienic Aspirating Pump
with Antibacterial Treatment*

*Shatterproof Detector Tubes
for Safety Purposes*

- Certified to SEI (Safety Equipment Institute)
- Certified to ISO9001:2008 (Quality Management System)
- Japan Design Registration No.1131898
- United States Design Patent No.US D467,334 S
- The Model AP-20 aspirating pump is certified
in conformity to the European standard [EN1231]



Unit 13 Pioneer Road Faringdon Oxfordshire SN7 7BU
TEL: 01367 246 960 FAX: 01367 242 491
www.shawcity.co.uk
info@shawcity.co.uk



KOMYO RIKAGAKU KOGYO K.K.
URL <http://www.komyokk.co.jp/english/>
E-mail qa@komyokk.co.jp

Whenever

No chemical reagents to prepare - it is ready for immediate use.

Wherever

Light weight and compact, KITAGAWA's system is easy to carry in the most difficult situations.

Whoever

The system is simple and straightforward to operate and no academic knowledge is required - all personnel can operate it with ease.

Speedy

An accurate reading can be obtained within a few minutes and many sample points can be tested in a very short period of time.

Safety

As no electricity or heat is required, tests can be taken without risk of explosion, even in the most flammable atmospheres.



WE CONTRIBUTE TO PUBLIC SAFETY AND SECURITY

KITAGAWA GAS DETECTOR TUBES HAVE BEEN IMPROVED WITH A CLEAR LAYER OF FILM FOR EXTRA SAFETY.

If a tube is broken by accident, the glass pieces will not scatter.
Please read the instruction sheet provided in each

box of tubes before use.

We have been manufacturing and distributing the "KITAGAWA GAS DETECTOR TUBE SYSTEM" since our establishment in 1947.

By using KITAGAWA's experience and state-of-the-art technology, the gas detector tube system has been fully developed to ensure the maximization of accuracy, operation and safety in the field of gas detection and analysis.

"KITAGAWA GAS DETECTOR TUBE SYSTEM" is noted with above excellent features in analysis of gas concentration and is therefore widely used throughout the world.

KITAGAWA MODEL AP-20

with Model AP-20 aspirating pump and standard accessories which are composed of a carrying case, 2 pcs of rubber tube connector, 1 pce of grease and an instruction sheet.



*Certified in conformity with
the European standard EN 1231*

APPLICATIONS

Tube data and typical applications detailed on page 31



Industrial Hygiene

Gas detector tubes are successfully used for the quick measurement of harmful gases and vapours in the atmosphere and also the distribution of their concentration in the working area.



Fire/Explosion Prevention

Available to prevent fire and explosion by detecting combustible gases leaked or generated in workplaces, and by foreseeing spontaneous combustion in coal mines.




Process Control

Where gases are used as raw material or intermediates in various industries, impurities in the gas can be measured by gas detector tubes. This ensures high product quality and production efficiency by preventing deterioration of catalysts.

A Shatterproof Structure for Safety Purpose

A Shatterproof structure
or safety purpose

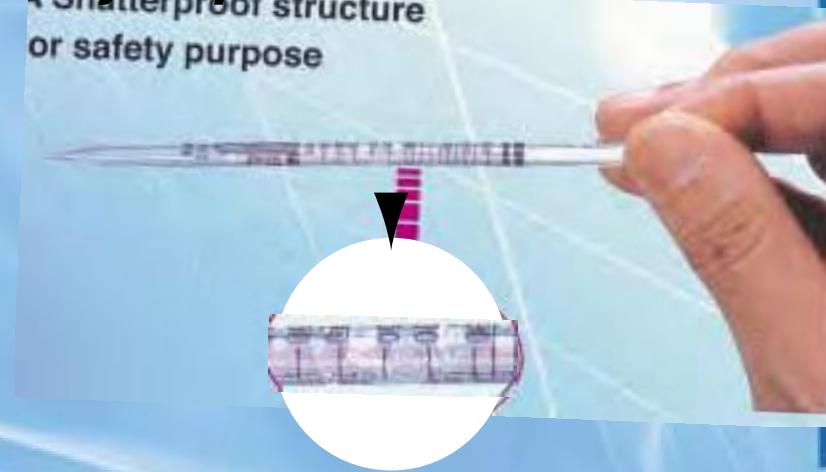

Air pollution Control

The Model P-10FG Flue gas sampler for air pollution control economically measures a range of flue gases such as Nitrogen compounds, SO₂, CO, CO₂, HCl and O₂.



Industrial Waste Water

Effluent can be analysed for certain types of pollution simply and quickly. Instant checks can be made almost anywhere.

CONTENTS

OPERATION OF AP-20	5
LIST OF "KITAGAWA" PRECISION DETECTOR TUBES	6
SPECIAL APPLICATION TUBES	27
COLLECTION TUBES	32
SPECIAL DETECTORS & ACCESSORIES	33
NUMERICAL INDEX OF KITAGAWA DETECTOR TUBES	38
APPLICATIONS	



Certificate of ISO 9001:2008

We KOMYO RIKAGAKU KOGYO K.K., have been assessed and certified as meeting the requirements of ISO 9001:2008, for the following activities.

The scope of registration:

1. The development, design, manufacture, sales and in-house maintenance services of detector tubes and pumps, gas sampling tubes and air flow indicators
2. The development, design, manufacture, sales of gas sensors
3. The development, design, manufacture, sales and in-house maintenance services of standard products (Portable, Transportable and Fixed type) of gas measuring instruments, gas detectors and gas alarm apparatus
4. The development, design, manufacture, sales and in-house maintenance services of specially ordered products
5. Maintenance services of products

The site details:

Head Office 1-8-28 Shimonoge, Takatsu-ku, Kawasaki-shi, Kanagawa, Japan
Aizu Komyo K.K. 380 Aza Kunema, Ooaza Niidate, Aizubange-machi, Kawanuma-gun, Fukushima, Japan
Osaka Branch 1-38 Enoki-cho, Suita-shi, Osaka, Japan
Fukuoka Sales Office 3-27-1 Higashihie, Hakata-ku, Fukuoka-shi, Fukuoka, Japan
Kitakanto Sales Office 217-3 Ooaza kawa, Ageo-shi, Saitama, Japan



OPERATION


KITAGAWA MODEL

AP-20

ASPIRATING PUMP FOR GAS DETECTOR TUBES

Hand strap allows the compact 300gm pump to be carried safely and easily.

Contoured Antibacterial Grip for Easy Handling

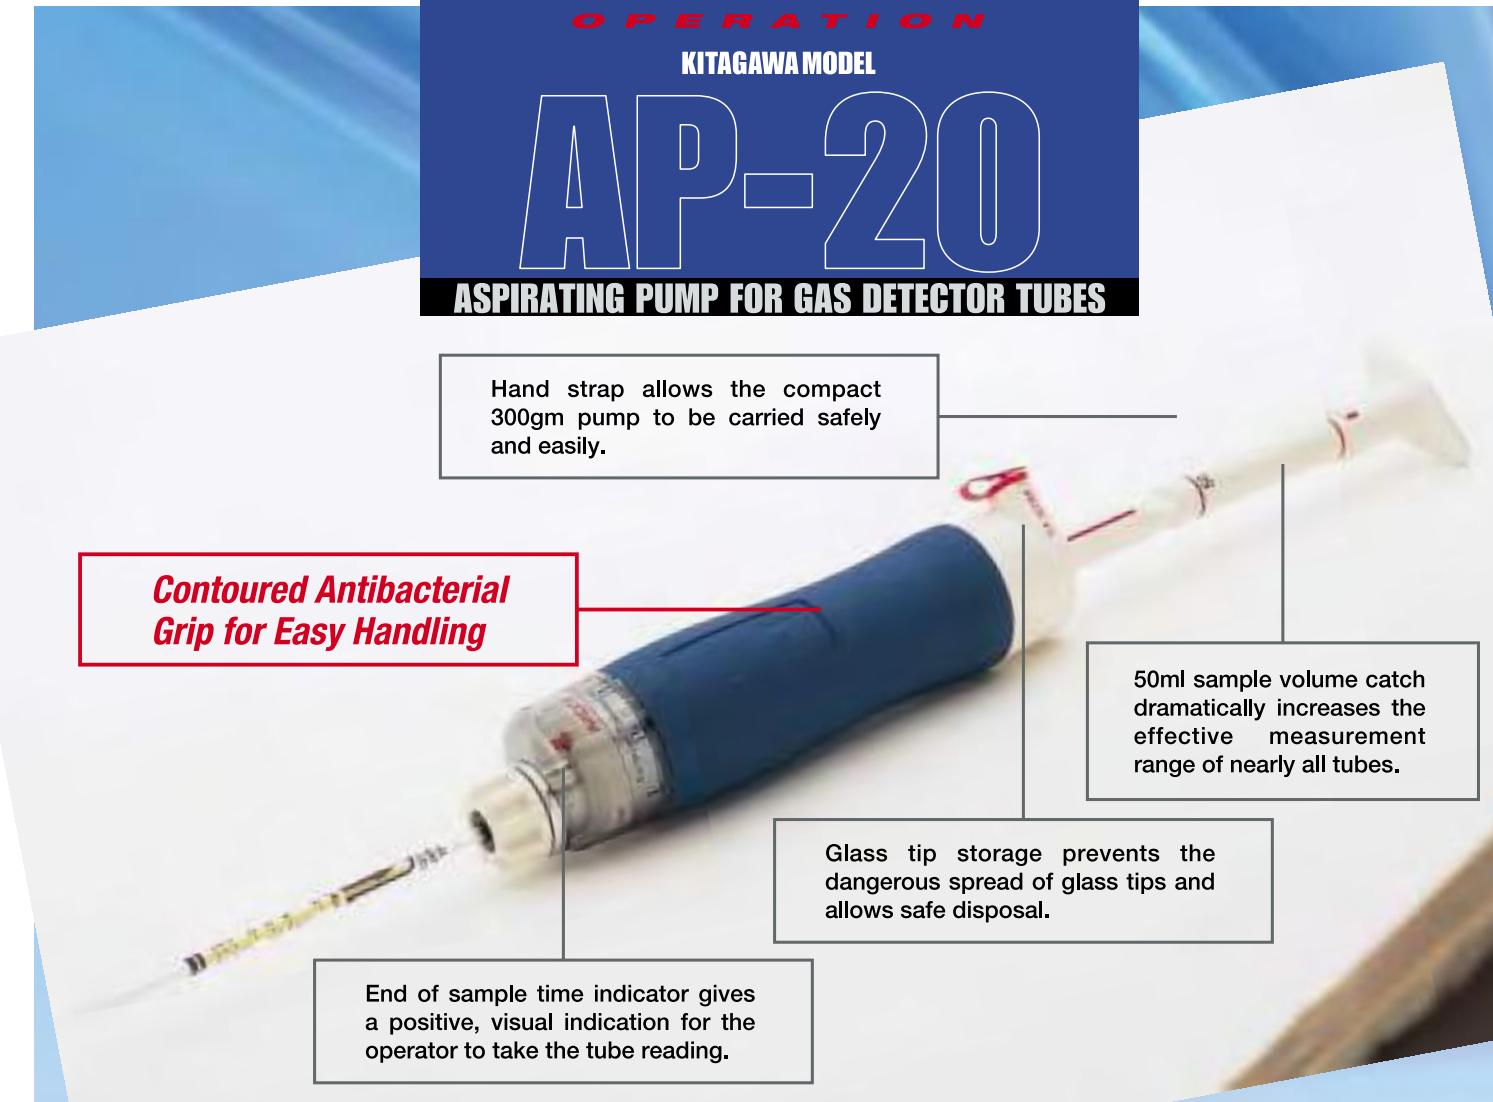

End of sample time indicator gives a positive, visual indication for the operator to take the tube reading.

1 Prepare aspirating pump.

Check the pump for leaks in accordance with "CHECKING PRIOR TO USE" in the instruction sheet.

2 Cut both ends of the gas detector tube.

Insert the tip of the gas detector tube into the tip cutter and scratch the tip of tube by rotating it for one revolution, then pull it toward you. (The glass tip can be thrown away by removing the tip cutter cap.)



3 Connect the gas detector tube to the aspirating pump.

The sample gas must be drawn through the gas detector tube in the correct direction. Insert the gas detector tube into the rubber tube connector with the tube's directional arrow pointing toward the pump.




4 Pull the handle.

Align the red line on the bottom case and that on the shaft and pull the pump handle to its full 100ml locking position. If the sample calls for a half stroke, pull out pump handle until 50ml line appears, and shaft will be locked at 50ml.



5 Draw the sample gas.

Draw the sample gas for the specified time at the desired sampling point, and confirm with the flow indicator that the sample is completed. The sample time required for each detector tube is stated clearly in the instruction sheet.

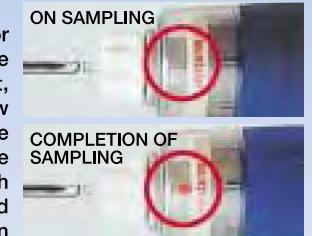

6 Return the handle.

When the sample is completed, turn the handle 1/4 turn (90 degrees) clockwise or counter-clockwise to unlock the handle. Confirm that the handle remains extended. (If the handle returns part way, the sample is incomplete, and this will cause a low reading). Some detector tubes require extra pump strokes (i.e., more than 100ml of air). In this case, push back the handle and repeat the operation.



7 Read the concentration.

Remove the gas detector tube from the aspirating pump after the prescribed sample volume has been drawn. Read the concentration of gas at the maximum end of the stain against the printed scale on the detector tube. Some detector tubes require a temperature correction using a table or correction coefficient provided in the instructions.

LIST OF "KITAGAWA" PRECISION DETECTOR TUBES

NOTICE 1

1. In cases where the detector tubes have more than one measuring range, the scale range printed on each detector tube and the number of pump strokes is marked by a circle (○).

Example: Tube No. 102SD Measuring Range (ppm) No. of Pump Strokes

250~5,000	1/2
100~2,000	①
40~800	2

2. The range printed on the tube box shows the range of the minimum and maximum detectable concentrations.

Example: Tube No. 102SD 40~5,000

NOTICE 2

In cases where the gas concentration is read by using a conversion chart, as shown in the tube instruction sheet, a 蔦 mark is shown after the tube number in this brochure, for example: 190U 蔦. However, this 蔦 mark is shown only in the brochure and does not appear on the printed tube box or in the instruction sheet. When ordering such tubes, it is unnecessary to include the 蔦 mark on your purchase order.

NOTICE 3

A constant colour stain is produced which varies in length according to the concentration of the substance being measured. The reading can be obtained directly from the scale printed on the tube (Direct reading method) or by using the concentration chart furnished in each box. (Concentration chart method) All tubes suffixed "S" and "U" on the tube No. have direct reading scales.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Acetaldehyde CH ₃ CHO Concentration chart method	133A	0.004~ 1.0%	1	Yellow	Pink	Mfg. synthetic rubber, plastics; various organics mfg, perfume, flavors, fragrances	1	10	Acetone (1,400), Acrolein (35), Methyl ethyl ketone (900), Methyl isobutyl ketone (2,900), SO ₂ (10)	50 (J) 20 (B)
Acetaldehyde CH ₃ CHO	133SB	5~140	1	Yellow	Pink	Mfg. synthetic rubber, plastics, various organics	2	10	Other aldehydes, Ethanol	
Acetic acid CH ₃ COOH	216S	1~50	1	Pale pink	Yellow	Mfg. cellulose acetate rayon, vinyl acetate, a seasoning	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	10 (J.A.B)
Acetic anhydride (CH ₃ CO) ₂ O	216S 蔦	1~15	1	Pale pink	Yellow	Acetylating agent	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	5 (J) 1 (A) 0.5 (B)
Acetone CH ₃ COCH ₃	102SA	1.0~ 5.0% 0.1~ 2.0%	1/2 ①	Orange	Dark brown	Leakage & fire hazard detection in acetate rayon industry, paints industry & pharmaceutical industry	3	10	Alcohols, Other Ketones, Aromatic hydrocarbons, Esters, Halogenated hydrocarbons (0.5%)	
	102SC	0.01~ 4.0%	1	Yellow	Pink		1	10	Acetaldehyde (30), Acrolein (20), Methyl ethyl ketone (150), Methyl isobutyl ketone (400)	200 (J) 500 (A.B)
	102SD	125~ 5,000 50~ 2,000 20~800	1/2 ①	Yellow	Dark brown	Industrial hygiene for both plant and laboratory	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	

*Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Acetylene HC≡CH	101S	50~ 1,000	1	Pale yellow	Brownish blue	Process control & leakage detection in synthetic ammonia plant, cuprammonium rayon process	3	10	Oleffins (10), H ₂ S (10), CO (50), NH ₃ , Butadiene (25), HCH, Cl ₂ , NO ₂ , CS ₂ , Benzene	
Acetylene - Ethylene separation measurement C ₂ H ₂ & C ₂ H ₄	280S	C ₂ H ₂ ; 20~300 C ₂ H ₄ ; 200~2,000	1	Yellow Pale yellow	Dark brown Blue		1	2 × 5	Tube for C ₂ H ₂ ; CO (10), H ₂ (5,000), Ethylene (2,000) Tube for C ₂ H ₄ ; CO (1,350), Acetylene (370), Propylene (20)	
Acrolein (Acryl aldehyde) CH ₂ =CHCHO Concentration chart method	136	0.005~ 1.8%	1	Yellow	Pink	Leakage & fire hazard detection in plastics industry	1	10	Acetylene(20), Acetaldehyde (70), Methyl ethyl ketone (60) Methy isobutyl ketone (500)	0.1 (J.B)
Acrylic acid CH ₂ =CHCOOH	216S 蔦	1~50	1	Pale pink	Yellow	Material of acrylic resin	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	2 (A)
Acrylonitrile (Vinyl cyanide) CH ₂ =CHCN	128SA	0.1~ 3.5%	1	Orange	Dark green	Leakage & fire hazard detection in synthetic rubber & plastics industry	3	10	Acetylene(3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons (50)	
	128SB	10~500	1	Yellow	Pale blue	Leakage detection	2	10		
	128SC	1~120	2	Yellow	Pink		1	2 × 5	Methyl ethyl ketone (600), Styrene (250), HCN (2), Butadiene (200)	2 (J.A.B)
	128SD	1~20 0.5~10 0.25~5 0.2~4	① 2 4 5	Yellow	Red	Industrial hygiene, human carcinogen: recognized to have carcinogenic potential	1	2 × 5	HCN	
	184S 蔦	20~500	1	Yellow	Pale blue	Leakage detection	2	10	Esters, Ketones, Alcohols, Aromatic hydrocarbons, Halogenated hydrocarbons	1 (J) 0.5 (A) 2 (B)
Ammonia NH ₃	105SA	0.5~ 10%	1	Pink	Grey or Yellow	Process control & leakage detection in synthetic ammonia plant, cuprammonium rayon process; fertilizer mfg.	3	10	Amines	
	105SB	50~900	1	Pale purple	Pale yellow	Process control	3	10	SO ₂ (1/4 × NH ₃ *), Cl ₂ (2), Amines	
	105SC	10~260 5~130	① 2	Pale purple	Pale yellow		3	10	SO ₂ (1/5 × NH ₃ *), Cl ₂ (2), Amines	
	105SD	1~20 0.5~10 0.2~4	① 2 5	Pale purple	Pale yellow	Synthetic ammonia plant, leakage detection of refrigerant in ice plant, Industrial hygiene	3	10	Amines	25 (J.A.B)
	105SE	10~200 5~100 1~20	1/2 ① 5	Pale purple	Pale yellow		3	10	Sulphur dioxide, Chlorine, Amines	
	105SH	0.5~ 30%	1	Pink	Blue + Brownish green	Process control & leakage detection in synthetic ammonia plant, cuprammonium rayon process, fertilizer mfg.	3	10	H ₂ S (3,000)	
	105SM	0.1~ 1.0%	1	Pale purple	Pale yellow	Process control	2	10	Amines	
Aniline (Aminobenzene) C ₆ H ₅ NH ₂	181S	2~30 1~15	① 2	White	Yellow	Industrial hygiene	3	10	Toluidine (1/3 × Aniline *), NH ₃ , Aliphatic amines or Aromatic amines (the same conc. of Aniline)	1 (J.B) 2 (A)

*Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					

Arsine	140SA	5~160	1	White	Dark brown	Doping gas analysis in semiconductor industry, waste gas analysis in metal refinery	2	10	H ₂ S (5), Hydrogen selenide (5), Phosphine (5)	0.1 (J) 0.005 (A) 0.05 (B)
	AsH ₃	0.1~2.0 0.05~1.0	① 2	Pale yellow	Pink	Industrial hygiene, semiconductor manufacturing process	2	10	Hydrogen selenide, Mercaptans, H ₂ S, HCN SO ₂	0.05 (B)
Benzene-in presence of Gasoline and/or other Aromatic hydrocarbons	118SB	5~300	1	White	Greenish brown	Industrial hygiene (suspected carcinogen in humans)	2	2~5	Toluene (over 150), Hexane (200), Xylene (over 300)	0.5 (A)
	C ₆ H ₆	1~80 0.2~1	① 5	White	Greenish brown		2	2~5	Toluene (1,000), Xylene (1,000), Ethyl benzene (1,000), Co (2), Hexane (2)	1 (B)
Benzene	C ₆ H ₆	4~100 2~50 1~25	1 ② 4	White	Greenish brown	Industrial hygiene (suspected carcinogen in humans)	2	10	Toluene, Xylene, CO(50), Hexane (100)	0.5 (A)
		1~75 0.2~15 0.1~7.5	1 ⑤ 10	White	Greenish brown		2	2~5	Toluene, Xylene, Co (2.0), Hexane (2.0)	1 (B)
Bromine Concentration chart method	Br ₂	1~20	1	White	Orange	Industrial hygiene	2	10	Cl ₂ (1), ClO ₂ , NO ₂	0.1 (J,A,B)
1,3-Butadiene CH ₂ =CHCH=CH ₂	168SA	0.03~2.6%	1	Brownish orange	Dark brown	Process control & fire hazard detection in synthetic rubber industry. mfg. synthetic rubber	3	10	Other organic gases or vapours except Halogenated hydrocarbons (50), Propane (0.2%), Acetylene (3%)	2 (A) 10 (B)
	168SB	30~600	1	Pale yellow	White	Leakage detection in synthetic rubber industry	3	10	CO, Butane, Pentane, Ethylene, Propylene, Butylene, H ₂ S, Benzene, NH ₃ , HCN	
	168SC	5~100 2.5~50	① 2	Pale yellow	Pale blue		1	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
	168SE	0.5~10.0 0.1~2.0	1 ④	Pink	White		3	2~5	H ₂ S, Isobutylene, NH ₃	
n-Butane	CH ₃ (CH ₂) ₂ CH ₃	0.05~0.6%	1	Orange	Brown	Combustible gas detection	3	10	Toluene, Hexane, Trichloroethylene	500 (J) 1,000 (A) 600 (B)
1-Butanol (n-Butyl alcohol)	CH ₃ CH ₂ CH ₂ CH ₂ OH	1~100	3	Yellow	Pale blue	Mfg. flotation reagent, stabilizer for solvent, industrial hygiene	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	50 (J) 20 (A)
2-Butanol (sec-Butyl alcohol)	CH ₃ CH ₂ CH(OH)CH ₃	10~300 4~120	② 4	Yellow	Pale blue	Organic solvent treating, industrial hygiene	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	100 (J,A,B)
tert-Butanol	(CH ₃) ₃ COH	20~500	1	Yellow	Brown		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	100(A)
Butyl acetate	CH ₃ CO ₂ C ₄ H ₉	0.01~1.0%	2	Orange	Brownish green	Leakage & fire hazard detection in paints industry & painting; printing inks, artificial leather synthetic dyes, drugs & perfumes	3	10	Acetylene (3%), Propane (0.2%) Other organic gases or vapours except Halogenated hydrocarbons (50)	100 (J) 150 (A,B)
		10~400	1	Pale yellow	Pale blue	industrial hygiene	1	10	Other organic gases or vapours	
Butyl acrylate	CH ₂ =CHCO ₂ (CH ₂)CH ₃	2~60	2	Yellow	Pale blue	Material of acrylic resin	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	2 (A) 1 (B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Butyl amine	C ₄ H ₉ NH ₂	105SD 蘭	1~20		1	Pale purple	Pale yellow		Organic synthesis intermediate; mfg. insecticide, emulsifying agent, medicine	3 10 Amines 5 (J)
Butyl cellosolve (Ethylene glycol monobutyl ether/2-Butoxyethanol)	C ₄ H ₉ OCH ₂ CH ₂ OH	190U 蘭	10~1,000	3	Yellow	Pale blue			Organic solvent treating Industrial hygiene	2 10 Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons 20 (A) 25 (B)
Butyl ether	(CH ₃ CH ₂ CH ₂ CH ₂) ₂ O	111U 蘭	10~1,200	1	Yellow	Brown				2 10 Alcohols, Esters, Ketones, Aromatic hydrocarbons
tert-Butyl mercaptan	(CH ₃) ₃ CSH	130U	1~10 0.5~5	1/2 ①	Pale yellow	Pink				2 10 Arsine, Hydrogen selenide, H ₂ S, HCN 0.5 (A)
		165SB	5~80 2.5~40	1/2 1	Yellow	Pink				2 10 H ₂ S, PH ₃ , Arsine, Hydrogen selenide, HCN, NO ₂ , NH ₃ , SO ₂ , Other Amines
Butyl methacrylate	CH ₂ =C(CH ₃)CO ₂ C ₄ H ₉	111U 蘭	20~1,000	1	Yellow	Brown			Organic synthesis intermediate; mfg. synthetic resin, lubricant additive, rust-proof for metal, paper coating agent	2 10 Alcohols, Esters, Ketones, Aromatic hydrocarbons
tert-Butyl methyl ether (MTBE)	CH ₃ OC(CH ₃) ₃	111U 蘭	25~500	1	Yellow	Brown			Fuel, powder, blast cell, etc; antiknock, solvent, abagerent	2 10 Alcohols, Esters, Ketones, Aromatic hydrocarbons 50(A)
Butyric acid	CH ₃ CH ₂ CH ₂ COOH	216S 蘭	3~60	1	Pale pink	Yellow			Conflate artificial flavour; medicine; emulsifying agent	3 10 SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)
Carbon dioxide	CO ₂	126SA	0.2~5.2% 0.1~2.6%	1/2 ①	Purplish blue	Pale pink			Air contamination test in buildings, closed vessels, tunnels, other confined spaces, CO ₂ concentration control in green houses, poultry farm, fruit storage	2 10 HCN (200), Cl ₂ (100), SO ₂ (500), H ₂ S (100)
Carbon dioxide	CO ₂	126B	0.03~0.7% 100~1,500	① 3	Purplish blue	Pale pink				2 10 HCN (100), Cl ₂ (200), SO ₂ , H ₂ S (150), NO ₂
		126SB	0.05~1.0%	1	Purplish blue	Pale pink				2 10 HCN (100), Cl ₂ (200), SO ₂ , H ₂ S (150), NO ₂ 5,000 (J,A,B)
Carbon dioxide	CO ₂	126SF	200~4,000 100~2,000	1/2 ①	Pink	Yellow				2 10 NO ₂ , H ₂ S, HCl, SO ₂ , HCN, Cl ₂
		126SG	0.04~1.4% 0.02~0.7%	1/2 ①	Pink	Yellow				2 10 HCN
Carbon dioxide -extra high range	CO ₂	126SH	1~20%	1	Pink	Yellow			Combustion gas analysis	2 10 SO ₂ (3,000), H ₂ S (3,000), NO ₂ (50)
Carbon dioxide -ultra high range	CO ₂	126UH	5~50%	1/2	White	Purple			Industrial hygiene	2 10
Carbon disulphide	CS ₂	141SA	30~500	1	Pink	Yellow			Recovery control in viscose rayon & cellophane plant, mfg. viscose rayon & cellophane	2 2~5 H ₂ S (400), SO ₂ , Cl ₂ 1 (J) 1 (A) 10 (B)
		141SB	2~50 0.8~20	② 4	Pink	Yellow			Industrial hygiene	3 2~5 H ₂ S (120), SO ₂ , Cl ₂

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Carbon monoxide CO Concentration chart method	100	25~1,000 5~300	1 3	Yellow Dark brown		Gas manufacture blast furnace, garage, car park, tunnel; atmospheric pollution survey, combustion of coal gas	3	10	Ethylene (5,000), H ₂ (5,000), Acetylene, SO ₂ or NO ₂ (1/5 × CO*)	
Carbon monoxide-in presence of Ethylene, colour intensity CO	106B	Measurement for 30~300 seconds 10~1,000	1	Pale yellow Green to Blue		Prediction of underground spontaneous combustion of coal	3	10	H ₂ S (1,000), NO ₂ (1), H ₂ (10%)	
Carbon monoxide-in presence of Ethylene and Nitrogen oxides, colour intensity CO	106C	Measurement for 30~300 seconds 10~1,000	1	Pale yellow Green to Blue		Gas manufacture blast furnace, garage, car park, tunnel; atmospheric pollution survey, prediction of underground spontaneous combustion of coal, leakage detection of coal gas, combustible gas analysis; organic syntheses	2	10	H ₂ (10%), H ₂ S (1,000)	
Carbon monoxide CO	106S	10~250	3	Yellow Dark brown		Gas manufacture, blast furnace, garage, car park, tunnel; atmospheric pollution survey, combustion of coal gas	2	10	Acetylene (5), H ₂ S (20), SO ₂ (1/5 × CO*), NO ₂ (1/10 × CO*)	50 (J) 25 (A) 30 (B)
	106SA	40~2,000 20~1,000 5~50	1/2 ① 4	Yellow Dark brown		Ethylene or H ₂ (5,000), Acetylene (1/5 × CO*) SO ₂ (1/5 × CO*), NO ₂ (1/5 × CO*)	3	10		
	106SC	1~50	1	Orange Reddish purple		Gas manufacture blast furnace, garage, car park, tunnel; atmospheric pollution survey, prediction of underground spontaneous combustion of coal, leakage detection of coal gas, combustible gas analysis; organic syntheses	1	10	Formic acid, SO ₂ , C ₂ H ₂ , H ₂ , H ₂ S	
	106SH	0.1~2.0%	1	White Brown			1	10	Propane (0.15%), iso-Butane (0.2%), Hexane (0.1%), Acetylene (0.3%), Ethylene (0.15%)	
	106SS	30~500	1	Yellow Dark brown			1.5	10	Acetylene (1/20 × CO*), SO ₂ (1/2 × CO*), NH ₃ (100 × CO*), H ₂ S (1/2 × CO*)	
	106UH	0.2~20% 0.1~10%	1/2 ①	White Dark brown	Insect control		3	10	Propane, iso-Butane, Acetylene, Ethylene, Hexane	
Carbon tetrachloride (Tetrachloromethane) CCl ₄	147S	5~60	1	White Red		Paint manufacture, fire extinguishers waxes, polishes	1	2 × 5	Phosgene, Halogens, Cl ₂ , Trichloroethylene, Halogenated hydrocarbons	5 (J.A) 2 (B)
Carbonyl sulphide COS	239S	5~60	1	Pink Yellow		Process control in chemicals mfg.	3	2 × 5	SO ₂ (1/5 × COS*), CS ₂ (1/10 × COS*), H ₂ S (1/2 × COS*), C ₄ H ₉ (0.1%)	
Chlorine Cl ₂	109SA	1~40	1	White Yellowish orange		Leakage detection in electrolytic soda plant; leakage detection & concentration control in synthetic rubber & plastics industry, refinery of titanium & aluminum; chlorinated hydrocarbons, synthetic chemistry, industrial hygiene	2	10	Br ₂ (1), ClO ₂ (1), NO ₂ (1/2 × Cl ₂ *)	
	109SB	0.5~10.0 0.125~2.5 0.1~2.0	① 4 5	White Pale orange			2	10	Br ₂ (1), ClO ₂ (1), NO ₂ (1/5 × Cl ₂ *), NCl ₃ (5)	0.5 (J.A.B)
	109U	0.1~2 0.05~1	① 2	White Pale purple			2	10	HCl (20 × Cl ₂ *), NO ₂	
Chlorine dioxide ClO ₂ Concentration chart method	116	1~20	1	White Reddish orange		Leakage detection in textile & paper bleaching plant; water treatment	2	10	Br ₂ , Cl ₂ or NO ₂ (1)	0.1 (A.B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Chlorobenzene C ₆ H ₅ Cl	178SB	5~140 1~5	① 5	White Pale brown		Industrial hygiene	2	2 × 5	Toluene, Xylene, CO (50), n-Hexane (100), Benzene, Ethyl benzene	10 (J.A) 1 (B)
Chloroform (Trichloromethane) CHCl ₃	152S	70~500 35~250 23~167	② 3 4	White Yellowish orange		Industrial hygiene (suspected carcinogen in humans)	2	2 × 5	Halogens, Halogenated hydrocarbons, n-Hexane (200)	3 (J) 10 (A) 2 (B)
Chloropicrin (Nitrotrichloromethane) Cl ₃ CNO ₂	172S	0.1~16.0 0.05~8.0	① 2	White Pink			1	2 × 5	Carbon tetrachloride, Phosgene	0.1 (J.A)
Chloroprene (2-Chlorobutadiene) CH ₂ =CCICH=CH ₂	169S	1.0~20 0.5~10	1 ②	Greenish yellow Pink		Industrial hygiene	3	2 × 5	Cl ₂ , HCl (2,000), Vinyl chloride, Acetylene, Ethylene	10 (A)
Cresol C ₆ H ₅ (CH ₃)OH	183U	0.5~25.0	2	Pale yellow Pale brown			2	10	NH ₃ (200), Aliphatic amines (50), Aromatic hydrocarbons (50), Phenols (2.5)	5 (J) 20mg/m ³ (A)
Crotonaldehyde CH ₃ CH=CHCHO	190U	2~40	3	Yellow Pale blue		Compound materials	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	
Cumene (Isopropylbenzene) C ₆ H ₅ CH(CH ₃) ₂	111U	20~140	1	Yellow Brown		Organic synthesis intermediate; Fuel	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	50 (A)
Cyclohexane C ₆ H ₁₂	115S	0.01~0.6%	1	Orange Dark green		Fire hazard detection in paints industry & painting, extraction process of oils, fats, waxes	3	10	Paraffin hydrocarbons, Acetylene, Ethylene, Benzene (400), Toluene (800), Xylene (2,000)	150 (J) 100 (A.B)
Cyclohexanol C ₆ H ₁₁ OH	206U	5~500	2	Yellow Pale blue		Process control in synthetic rubber industry	2	10	Other alcohols	25 (J) 50 (A.B)
Cyclohexanone 	197U	2~100	3	Yellow Pale blue		Organic solvent treating, Industrial hygiene	3	10	Alcohols	20 (J.A) 10 (B)
Cyclohexene C ₆ H ₁₀	111U	20~300	1	Yellow Brown		Medicament, synthetic intermediate	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	100(A)
Cyclohexyl amine C ₆ H ₁₁ NH ₂	105SD	1~20	1	Pale purple Pale yellow		Organic synthesis; plasticizer; rubber processing; corrosion inhibitor, dye; dry-clean detergent; mfg. emulsifying agent	3	10	Amines	10 (A.B)
Decahydronaphthalene C ₁₀ H ₁₈	111U	20~200	1	Yellow Brown		Solvent, adstergent, wax for floor	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
n-Decane CH ₃ (CH ₂) ₈ CH ₃	111U	5~90	1	Yellow Brown		Organic synthesis intermediate; solvent, abstergent	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
Diacetone alcohol (4-Hydroxy-4-methyl-2-pentanone) (CH ₃) ₂ C(OH)CH ₂ COCH ₃	190U	10~250	3	Yellow Pale blue		Fire hazard detection in paints Industry, industrial hygiene	2	10	Alcohols, Halogenated hydrocarbons, Paraffin hydrocarbons, Aromatic hydrocarbons, Esters	50 (A.B)
Diborane B ₂ H ₆	242S	0.1~5.0 0.05~2.5 0.02~1.0	① 2 5	Pale yellow Reddish purple		Industrial hygiene, semiconductor manufacturing process	2	10	Arsine, Phosphine, Silane, Disilane	0.01 (J) 0.1 (A)
Dibutyl amine (C ₄ H ₉) ₂ NH	105SD	2~20	1	Pale purple Pale yellow		Mfg. dye	3	10	Amines	
o-Dichlorobenzene C ₆ H ₄ Cl ₂	214S	5~100	1	White Yellow		Solvent insecticide, industrial hygiene	2	10	Alcohols, Paraffin hydrocarbons, Esters, Aromatic hydrocarbons	25 (J.A.B)
p-Dichlorobenzene C ₆ H ₄ Cl ₂	215S	10~150	1	White Purplish brown			1	10	Benzene, Toluene, Hexane	10 (J.A) 25 (B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V. (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
1,1-Dichloroethane (Ethylidene chloride) <chem>CH3CHCl2</chem>	235SA	10~160	1	White	Purple		1	3 × 5	Nitrogen oxides, Halogens, Halogenated hydrocarbons, Hexane (20), Alcohols (400), Toluene (20)	100(J.A.B)
1,2-Dichloroethane (Ethylidene dichloride) <chem>CICH2CH2Cl</chem>	230SA	5~50	1	White	Purple	Industrial hygiene	1	3 × 5	Nitrogen oxides, Halogens, Halogenated hydrocarbons, Hexane (100)	10 (J.A) 5 (B)
2,2-Dichloroethyl ether (<chem>C(=O)C(Cl)Cl</chem>) <chem>O</chem>	223S	2~30	1	Yellowish green	Pink		1	2 × 5	Halogenated hydrocarbons	15 (J) 5 (A)
1,2-Dichloroethylene (Acetylene dichloride) <chem>CHCl=CHCl</chem>	145SA	42~840 [20~400] 9.2~184 4.2~84	1/2 ① 2 4	Yellow	Red	Extraction of natural dyes; mfg. perfumes; paints industry & painting; ferment retardation, industrial hygiene	1	10	Vinyl chloride, Hydrogen chloride, Trichloroethylene, Cl2	150 (J) 200 (A.B)
Dichloromethane (Methylene chloride) <chem>CH2Cl2</chem>	180S	30~ 1,000 10~200	② 4	White	Reddish orange	Industrial hygiene	2	2 × 5	Halogenes, Halogenated hydrocarbons	50 (J.A) 100 (B)
1,3-Dichloropropane <chem>C(=O)C(Cl)Cl</chem>	194S	10~500	1	White	Purple		1	2 × 5	Halogenated hydrocarbons	
1,3-Dichloropropane <chem>C(=O)C(Cl)Cl</chem>	249S	0.5~10	1	Greenish yellow	Pink	Fumigation in soil by the name of D-D	3	2 × 5	Chloropicrin (1,800), MITC (600)	1(A)
Dicyclopentadiene <chem>C10H12</chem>	190U	2~60	3	Yellow	Pale blue	Mfg. EP rubber, unsaturated polyester resins, coating materials and perfume	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	5 (A)
Diethyl amine <chem>(C2H5)2NH</chem>	222S	1~20	1	Pale purple	Pale yellow	Industrial hygiene	3	10	NH ₃ , Other amines	10 (J) 5 (A.B)
Diethylbenzene <chem>C6H5(C2H5)2</chem>	111U	10~180	1	Yellow	Brown	Organic synthesis intermediate; solvent, abstergent	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
Ethyl ether (Diethyl ether) <chem>C2H5OC2H5</chem>	107SA	0.04~ 1.4%	1	Orange	Dark green	Fire hazard detection in solvent extraction process, hospital, laboratory, organic syntheses, clinical laboratories, explosive	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons (50)	400 (J.A) 100 (B)
	107U	20~400	1	Pale yellow	Pale blue	mfg.	2	10	Alcohols, Ketones, Esters, Aromatic hydrocarbons	
Diisobutyl ketone <chem>[(CH3)2CHCH2]2CO</chem>	139U	20~ 1,000	1	Yellow	Pale blue		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons, Paraffin hydrocarbons	25 (A)
Diisopropyl amine <chem>[(CH3)2CH]2NH</chem>	105SD	1~16	1	Pale purple	Pale yellow	Dyestuffs, surfactant, herbicide	3	10	Amines	5 (A.B)
N,N-Dimethylacetamide <chem>CH3CON(CH3)2</chem>	229S	5~70	2	Pale purple	Pale yellow	Solvents for chemical reaction, refinery and resins paint remover	1	10	CO ₂ , NH ₃ , Amines, Hydrazine	10 (J.A.B)
Dimethyl amine <chem>(CH3)2NH</chem>	227S	1~20	1	Pale purple	Pale yellow	Industrial hygiene	3	10	NH ₃ , Other amines	10 (J) 5 (A) 2 (B)
N,N-Dimethylaniline <chem>C6H5N(CH3)2</chem>	105SD	0.5~9	1	Pale purple	Pale yellow	Mfg. Vanillin; dye	3	10	Amines	5 (J.A.B)
Dimethyl ether (Methyl ether) <chem>CH3OCH3</chem>	123S	0.01~ 1.2%	1	Orange	Dark brown	Impurity test of Methyl chloride, process control, refrigeration	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons	400 (B)
N,N-Dimethylformamide <chem>HCON(CH3)2</chem>	196S	[2~30] 1~15	① 2	Pale purple	Pale yellow	Stationary phase of chromatography	2	10	SO ₂ (200), CO ₂ (0.1%), NH ₃ , Amines, Hydrazine	

※Interfered by coexistence more than parenthesized rate.										
※Interfered by coexistence more than parenthesized rate.										

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V. (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
1,4-Dioxane <chem>OCC1CCOC1</chem>	139SB	0.05~ 2.5%	2	Orange	Brownish green	Fire hazard detection in paints industry & painting industry, industrial hygiene	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons (50)	10 (J) 20 (A) 25 (B)
Dipropyl amine <chem>[CH3(CH2)2]2NH</chem>	119U	20~500	1	Yellow	Pale blue		2	10	Alcohols, Toluene (500)	
Divinyl benzene <chem>C6H4(CHCH2)2</chem>	105SD	1~14	1	Pale purple	Pale yellow	Synthesis intermediate	3	10	Amines	
Ethyl acetate <chem>CH3CO2C2H5</chem>	158S	5~50	1	White	Yellow	Ion exchange resin and membrane, synthetic rubber, etc.	3	10	Methanol (0.35%), Ethanol (0.18%), Ethyl acetate (700), Butyl acetate (700), Butadiene (5), Formaldehyde (15), Acetaldehyde (350), Acrylonitrile (400)	10 (A)
Epichlorohydrine (1-Chloro-2,3-epoxypropane) <chem>C3H5OCl</chem>	192S	5~50	3	Greenish yellow	Pink	Mfg, Epoxy resin, Chlorinated rubber, Glycerin	1	2 × 5	Halogenated hydrocarbons	0.5 (A.B)
Ethyl acetate <chem>CH3CO2C2H5</chem>	111SA	0.1~ 5.0%	1	Orange	Brownish green	Fire hazard detection in paints industry & painting, mfg, artificial leather artificial silk, perfumes & flavours, photographic films & plates	3	10	Acetylene (3%), Propane (0.2%) Other organic gases or vapours except Halogenated hydrocarbons (50)	200 (J.B) 400 (A)
Ethyl acrylate <chem>CH2=CHCO2C2H5</chem>	111U	10~ 1,000	1	Yellow	Brown	Fire hazard detection in paints industry & painting	2	10	Other esters, Ketones, Alcohols, Aromatic hydrocarbons, Halogenated hydrocarbons	
Ethyl alcohol (Ethanol) <chem>C2H5OH</chem>	211U	5~60	2	Yellow	Pale blue	Material of Acrylic resin	2	10	Alcohols, Paraffin hydrocarbons, Esters, Halogenated hydrocarbons, Aromatic hydrocarbons	5 (A.B)
Ethyl amine <chem>C2H5NH2</chem>	104SA	0.05~ 5.0%	1	Yellowish orange	Pale green	Fire hazard detection in hospital, laboratory, pharmaceutical industry, mfg, perfumes & cosmetics	3	10	Paraffin hydrocarbons, Alcohols, Esters, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons	1,000 (A.B)
Ethyl amine <chem>C2H5NH2</chem>	227S	1~20	1	Pale purple	Pale yellow	Industrial hygiene	3	10	Ammonia, Other Amines	10 (J) 5 (A) 2 (B)
Ethyl benzene <chem>C6H5C2H5</chem>	179S	10~500	1	White	Brown		1.5	10	Toluene (25), Xylene (50), Benzene (10), Methanol (1%), Hexane (0.1%)	50 (J) 20 (A) 100 (B)
Ethyl-tert-Butyl Ether (ETBE) <chem>C2H5O(CH3)3</chem>	248U	1~60	3	Yellow	Pale Blue	Used for automobile fuel adding the ETBE in Gasoline	1	10	Ethanol	5 (A)
Ethyl cellosolve (Ethylene glycol monoethyl ether) <chem>C2H5OCH2CH2OH</chem>	190U	5~500	3	Yellow	Pale blue	Organic solvent treating	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	5 (J) 10 (B)
Ethyl cellosolve acetate (Ethylene glycol ethyl ether acetate) <chem>CH3CO2CH2OC2H5</chem>	190U	5~150	3	Yellow	Pale blue		2	10	Halogenated hydrocarbons	
Ethylene <chem>H2C=CH2</chem>	108B	0.5~100 0.1~20	① 5	Pale yellow	Blue	Coal mining safety; concentration control in ripening fruits; organics, mfg: plastics	3	10	CO, NO ₂ (1), Cl ₂ , Butane, Pentane, Acetylene, H ₂ S (1,000), HCN, CS ₂ , NH ₃ , H ₂ (10%)	200 (A)
Ethylene <chem>H2C=CH2</chem>	108SA	20~ 1,200	1	Yellow	Blue		2	10	CO, H ₂ S, Acetylene, Propylene	
Ethylene <chem>H2C=CH2</chem>	108SC	1~200	4	Yellow	Blue	Used for fruits ripening control	2	2 × 5	Acetylene, CO, Propylene, H ₂ S	

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Ethylene dibromide (1, 2-Dibromoethane) <chem>BrCH2CH2Br</chem>	166S	1~50	1	White	Yellow	Concentration control in granary fumigation process	1	2×5	Halogens or Halogenated hydrocarbons, Hexane (200)	0.5 (B)
Ethylene glycol (Monoethylene glycol) <chem>HOCH2CH2OH</chem>	232SA	20~250 mg/m³	2	Pink	Yellow	Industrial hygiene	1.5	2×5	Ethylene oxide, SO₂, Aldehydes, H₂S	
	232SB	3~40 mg/m³	3	Pale pink	Yellow		2	2×5	Aldehydes, SO₂, H₂S	
Ethylene oxide <chem>CH2CH2O</chem>	122SA	1.0~4.0% 0.01~1.8%	1/2 ①	Orange	Dark brown	Concentration control in fumigation of foodstuffs & textiles, fire hazard detection in ethylene glycol plant, sterilization	3	10	Alcohols, Ketones, Aromatic hydrocarbons, Esters, Halogenated hydrocarbons (0.5%)	1 (J.A) 5 (B)
	122SM	5~100	3	Pink	Yellow		3	10	Alcohols, Esters, Aromatic hydrocarbons	
	122SC	1~15	3	Pale pink	Yellow	Concentration control in fumigation & textiles	2	2×5	Aldehydes, SO₂, H₂S	
	122SD	0.7~14.0 0.1~2.0	1 ④	Yellow	Pale pink	Atmospheric pollution surveys in hospitals	1	2×5	Formaldehyde (0.5)	
	122SL	130~2,600 50~1,000	1/2 ①	Yellow	Pale blue	Concentration control in fumigation of foodstuffs & textiles, fire hazard detection in ethylene glycol plant, sterilization	3	10	Alcohols, Esters, Ethers, Ketones, Aromatic hydrocarbons, Aliphatic hydrocarbons(over C₅), Halogenated hydrocarbons	
	165SA	4~160 2~80 1~40	1 ② 4	White	Yellow	Atmospheric pollution survey, concentration control of odorant, plastics manufactures	2	10	Methyl sulphide (1), NO₂ (1), Cl₂ (0.2)	
	165SB	5~80 2.5~40	1/2 1	Yellow	Pink	In LP gas	2	10	H₂S, PH₃, Arsine, Hydrogen selenide, HCN, NO₂, NH₃, SO₂, Other Amines	
	130U	1~10 0.5~5	1/2 ①	Pale Yellow	Pink	Industrial hygiene	2	10	Arsine, Hydrogen selenide, H₂S, HCN	
Ethyl methacrylate <chem>CH2=C(CH3)CO2C2H5</chem>	111U	20~500	1	Yellow	Brown	Organic synthesis intermediate; mfg. synthetic resin, lubricant additive, rust-proof for metal, paper coating agent	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
Formaldehyde <chem>HCHO</chem>	171SA	20~1,500	1	Yellow	Pink	Atmospheric pollution survey, germicide, fungicide organic mfg. Industrial hygiene	2	2×5	Other aldehydes	0.5 (J) 2 (B)
	171SB	1~35	3	White	Brownish orange		3	2×5	Other aldehydes (1), Styrene, Ether (1,000), Ethyl acetate (1,000), Trichloroethylene (500)	
	171SC	0.1~4.0 0.05~2.0	5 10	Yellow	Pink		1	10	Acetaldehyde, NH₃, (10), NO₂ (3)	
Formic acid <chem>HCOOH</chem>	216S	1~50	1	Pale pink	Yellow	Mfg. organic medicine, Industrial hygiene	3	10	SO₂ (1/20 × HCOOH), NO₂ (10), HCl (2 × HCOOH), Cl₂ (5), Acetic acid	5 (J.A.B)
Furan (Furfuran) <chem>HC=CH >0 HC=CH</chem>	122SA	0.2~2.0% 0.01~0.9%	1/2 ①	Orange	Dark brown	Fire hazard detection in paints industry & painting	3	10	Aromatic hydrocarbons, Esters, Ketones, Alcohols, Halogenated hydrocarbons	
Furfural (2-Furaldehyde) <chem>HC=CH >0 HC=C-CHO</chem>	190U	2~60	3	Yellow	Pale blue	Materials of Nylon 66, insecticide	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	2.5 (J) 2 (A.B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Furfuryl alcohol <chem>C4H3OCH2OH</chem>	238S	5~25	5	White	Black	Material of furan resin, resin denaturant, solvent, industrial hygiene	1	10		5 (J.B) 10 (A)
Gasoline (Petrol) <chem>CnHm</chem>	110S	0.05~0.6%	1	Orange	Dark green	Process control, industrial hygiene	3	10	Paraffin hydrocarbons, Acetylene, Ethylene, Cyclohexane, Benzene (400) Toluene (800), Xylene (2,000)	100 (J) 300 (A)
General hydrocarbons iso-C₄H₁₀, n-C₅H₁₂, n-C₈H₁₈, n-C₆H₁₄ Mineral turpentine	187S	50~1,400	1	Orange	Yellowish green		2	10	Aromatic hydrocarbons	
Heptane <chem>CH3(CH2)5CH3</chem>	113SB	100~2,000	1	Orange	Yellowish green	Industrial hygiene	2	10	Paraffin hydrocarbons, Aromatic hydrocarbons, Alcohols (6%), Ketones (6%), Esters (6%)	200 (J) 400 (A) 500 (B)
n-Hexane <chem>CH3(CH2)4CH3</chem>	113SA	0.11~1.32% 0.05~0.6%	1/2 ①	Orange	Dark green	Solvent recovery control & fire hazard detection in extraction of oils & fats, paints industry & painting	3	10	Paraffin hydrocarbons, Acetylene, Ethylene, Cyclohexane, Benzene (400) Toluene (800), Xylene (2,000)	40 (J) 50 (A)
	113SB	50~1,400	1	Orange	Yellowish green		2	10	Paraffin hydrocarbons, Aromatic hydrocarbons	20 (B)
	113SC	20~800 5~200	1 ③	Yellow	Pale blue		2	10	Toluene	
Hydrazine (Amidrazone) <chem>NH2 · NH2</chem>	219S	0.2~10 0.1~5 0.05~2.5	2 ④ 8	Yellow	Blue	Rocket fuel, corrosion protection of boiler, antioxidant	2	10	NH₃, Amines	0.01 (A) 0.02 (B)
Hydrogen <chem>H2</chem>	137U	0.05~0.8%	1/2	Yellow	Green	Industrial hygiene	3	5	Ethanol (0.4%), CO (500)	
Hydrogen chloride <chem>HCl</chem>	173SA	40~1,200 20~600	1/2 ①	Purple	Pink	Industrial hygiene, process control, leakage detection, fire hazard detection;	2	2×5	SO₂, Cl₂	5 (J) 1 (B)
	173SB	4~40 2~20 0.4~4	1/2 ① 5	Yellowish green	Pink	pharmaceuticals organics mfg.	3	2×5	Cl₂	
Hydrogen cyanide <chem>HCN</chem>	112SA	0.01~3.0%	1	Yellow	Brownish red	Concentration control in fumigation process	3	10	Acetone, CS₂, SO₂ (200), H₂S (100), Dicyanide	5 (J) 10 (B)
	112SB	2~100 0.5~25	① 4	Yellow	Red	Electro-plating, metal hardening fumigation process,	2	10	SO₂ (1), H₂S (3), NH₃ (5)	
	112SC	0.3~8	3	Yellow	Red	industrial hygiene	1	2×5	SO₂ (1), PH₃, H₂S, NH₃ (2)	
Hydrogen fluoride <chem>HF</chem>	156S	0.5~30 0.25~15 0.17~12	③ 6 9	Greenish yellow	Pink	Dehydrator, mfg. of Hydrofluoric acid, and Freon, industrial hygiene	3	10	Cl₂, HCl	0.5 (J.A) 1.8 (B)
Hydrogen peroxide <chem>H2O2</chem>	247S	0.5~10.0	5	White	Yellow	Mfg. bleach, industrial chemicals and medicine	3	10	HCHO (10)	1 (A.B)
Hydrogen selenide <chem>H2Se</chem>	167S	5~600 1~120	① 5	Pale yellow	Dark brown	Doping gas analysis in mfg. semiconductor, industrial hygiene	1	10	Arsine (10), H₂S, Iron carbonyl (10), SO₂, Hg, Acetylene (3%), CO (0.1%), Nickel carbonyl (10)	0.005 (J) 0.05 (A) 0.02 (B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.	
				Original	Stain						
Hydrogen sulphide	H ₂ S	6~300 [3~150]	1/2 ①	White	Dark brown	Mfg. viscose rayon, oil refinery, metal refinery, gas manufacture, chemical laboratory, process control	3	10	SO ₂ (12), Mercaptans (550), NO ₂ (2)	5 (J.B) 1 (A)	
		1~50 0.75~ 37.5	3 4								
		50~ 1,600	1	Pale yellow	Dark blue	Process control in sulphur recovery plant in petroleum refinery	3	10	CO (10), Ethylene, Propylene, Butylene, Acetylene or Methyl mercaptan (5), HCN, NH ₃		
		2~60 [1~30]	1/2 ①	White	Pale brown		3	10	SO ₂ (10), Mercaptans (300), NO ₂ (2)		
		2~40 [1~20] 0.5~10	1/2 ① 2	Yellow	Pink		2	10	PH ₃ , Mercaptans, NH ₃ , NO ₂		
		100~ 2,000 [50~ 1,000] 25~500	1/2 ① 2	White	Black		3	10	SO ₂ (5,000), Mercaptans		
		0.1~ 4.0%	1	Pale blue	Black	Process control in sulphur recovery plant in petroleum refinery	3	10	SO ₂ (0.5%)		
		0.1~ 1.2% [0.05~ 0.6%]	1/2 ①	White	Dark brown		2	10	SO ₂ (0.3%)		
		0.4~6.0 [0.2~3.0]	1/2 ①	Pale yellow	Pink	Industrial hygiene	2	10	Arsine, Hydrogen selenide, Mercaptans, PH ₃ , HCN, SO ₂		
		120UH	2~20%	1/2	Pale blue	Black	Oil field (esp. oil well)	3	10	SO ₂	
Hydrogen sulphide-ultra high range	H ₂ S	120UT [5~40%] 2.5~5%	[1/2] 1	Pale blue	Black	3	5	SO ₂ (8%)			
		H2S; 1~30 R-SH; 0.5~5	1	White Pale yellow	Pale brown Pink	Tube for H ₂ S; SO ₂ (1/3 × H ₂ S*), NO ₂ (1/5 × H ₂ S*) Tube for R-SH; NO ₂ (2), NH ₃ , H ₂ S (30)	2	2~5			
Isobutane	(CH ₃) ₃ CH	113SB 蘭 50~ 1,200	1	Orange	Yellowish green	Industrial hygiene	2	10	Alcohols, Ketones or Esters (60%), Aromatic hydrocarbons, Paraffin hydrocarbons		
Isobutyl acetate	CH ₃ CO ₂ CH ₂ CH(CH ₃) ₂	139SB 蘭 0.01~ 1.4%	2	Orange	Brownish green	Fire hazard detection in paints industry & painting; mfg. artificial leather, textile sizing compounds, printing inks	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons (50)	150 (A.B)	
		153U	10~400	1	Pale yellow	Pale blue	Industrial hygiene	1	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
Isobutyl acrylate	CH ₂ CHCO ₂ CH ₂ CH(CH ₃) ₂	211U 蘭 5~60	2	Yellow	Pale blue	Industrial hygiene	2	10	Alcohols, Paraffin hydrocarbons, Esters, Halogenated hydrocarbons, Aromatic hydrocarbons		
Isobutyl alcohol (Isobutanol)	(CH ₃) ₂ CHCH ₂ OH	208U	5~100	3	Yellow	Pale blue	Detergent of paint and varnish, mfg. Esters for fruit essence, industrial hygiene	2	10	Alcohols, Toluene	50 (J.A.B)
Isobutylene	(CH ₃) ₂ C=CH ₂	113SB 蘭 0.03~ 2.0%	1	Orange	Yellowish green	Mfg. Butyl-rubber	2	10	Paraffin, Aromatic hydrocarbons, Alcohols (6%), Ketones (6%), Esters (6%)		
Isobutyric acid	CH ₃ CH ₂ CH ₂ COOH	216S 蘭 3~50	1	Pale pink	Yellow	Disinfectant; artificial flavour; substrate for perfume; tan processing	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)		

*Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Measuring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Isopentyl acetate (Isoamyl acetate) CH ₃ CO ₂ CH ₂ CH ₂ (CH ₃) ₂	188U	10~400	1	Pale yellow	Pale blue	Industrial hygiene	1	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	100 (J.B) 50 (A)
Isopentyl alcohol (Isoamyl alcohol) (CH ₃) ₂ CHCH ₂ CH ₂ OH	209U	5~100	3	Yellow	Pale blue	Stabilizer for Sodium thiosulphate hypo, industrial hygiene	2	10	Alcohols, Toluene	100 (J.A.B)
Isophorone C ₉ H ₁₄ O	197U 蘭	5~80	3	Yellow	Pale blue	Solvent; ink, paint, lacquer, adhesive, copolymer, lacquer, finish and biocide	3	10	Alcohols	
Isoprene CH ₂ =C(CH ₃)CH=CH ₂	190U 蘭	1~16	3	Yellow	Pale blue	Industrial hygiene	2	10	Alcohols, Esters, Aliphatic hydrocarbons (over C ₃), Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	
Isopropyl acetate CH ₃ CO ₂ CH(CH ₃) ₂	139SB 蘭	0.01~ 1.2%	2	Orange	Brownish green	Fire hazard detection in paints industry & painting; mfg. artificial leather, plastic films, adhesives; recovery of acetic acid, industrial hygiene	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours except Halogenated hydrocarbons (50)	100 (J.A)
			111U	10~ 1,000	1	Yellow	Brown	2	10	Other Esters, Ketones, Alcohols, Aromatic hydrocarbons, Paraffin hydrocarbons
Isopropyl alcohol (2-Propanol) CH ₃ CH(OH)CH ₃	122SA 蘭	0.05~ 2.5%	1	Orange	Dark brown	Fire hazard detection in paints industry & painting; mfg. pharmaceuticals, cosmetics, perfumes, inks, leather dyes, antifreezes, hydraulic brake fluids; metal decreasing & drying: hospitals, laboratories	3	10	Other Alcohols, Ketones, Esters, Aromatic hydrocarbons, Halogenated hydrocarbons (0.5%)	400 (J) 200 (A)
			150U	50~ 1,200 20~480	2	Yellow	Pale blue	Industrial hygiene	2	10
Isopropyl cellosolve (CH ₃) ₂ HCO(CH ₂) ₂ COH	190U 蘭	5~350	3	Yellow	Pale blue		2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	25 (A)
Isopropyl ether [(CH ₃) ₂ CH] ₂ O	111U 蘭	30~800	1	Yellow	Brown	Gunpowder, blast, dyestuff, solvent, detergent, mfg. rubber cement, lens	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	250(A)
Isopropyl mercaptan (CH ₃) ₂ CHSH	130U	1~10 [0.5~5]	1/2 ①	Pale Yellow	Pink		2	10	Arsine, Hydrogen selenide, H ₂ S, HCN	
Isovaleric acid (CH ₃) ₂ CHCH ₂ COOH	216S 蘭	3~50	1	Pale pink	Yellow	Artificial flavour, perfume and medical uses	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	
Maleic anhydride C ₄ H ₂ O ₃	216S	0.2~10	4	Pale pink	Yellow	Material of polyester resin	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	0.1 (J) 0.01 mg/m ³ (A)
Mercury vapour Hg	142S	0.5~10 mg/m ³ 0.1~2.0 mg/m ³	1 ⑤	Grey	Pale orange	Electrolytic soda industry; mfg. thermometer, fluorescent lamp	3	10	HCl (0.5), NO ₂ (0.1), Cl ₂ (0.1), H ₂ S (0.5)	0.025 mg/m ³ (J.A)
Mesityl oxide (4-Methyl-3-penten-2-one) CH ₃ COCH=C(CH ₃) ₂	190U 蘭	5~100	2	Yellow	Pale blue	Industrial hygiene	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	15 (A) 50 (B)
Methacrylic acid CH ₂ =C(CH ₃)COOH	216S 蘭	1~50	1	Pale pink	Yellow	Mfg. soluble polymer	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	20 (A.B)

*Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
1-Methoxy-2-propanol <chem>CH2CHOHCOCH3</chem>	197U	100~500	1	Yellow	Pale blue	Solvent; ink, lacquer, cellulose, dye, etc	3	10	Alcohols	100 (A)
Methyl acetate <chem>CH3CO2CH3</chem>	111SA	0.1~3.0%	1	Orange	Dark green	Fire hazard detection in paints industry & painting: mfg. perfumes dyes, synthetic finishes	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapours, except Halogenated hydrocarbons	200 (J.A.B)
Methyl acrylate <chem>CH2=CHCO2CH3</chem>	211U	2~60	2	Yellow	Pale blue	Material of Acrylic resin, industrial hygiene	2	10	Alcohols, Esters, Paraffin hydrocarbons (over C ₃), Aromatic hydrocarbons, Halogenated hydrocarbons	2 (A)
Methyl alcohol (Methanol) <chem>CH3OH</chem>	119SA	0.05~6.0%	1	Yellowish orange	Pale green	Fire hazard detection in hospital & laboratory; pharmaceutical industry; paints industry & painting; mfg. printing inks, denatured-alcohol, antifreezes, perfumes & cosmetics, industrial hygiene	3	10	Paraffin hydrocarbons (over C ₃), Alcohols, Esters, Aromatic hydrocarbons, Halogenated hydrocarbons	200 (J.A.B)
	119U	20~1,000	1	Yellow	Pale blue		2	10	Alcohols, Esters, Aromatic hydrocarbons, Paraffin hydrocarbons, Halogenated hydrocarbons	
Methanol in LPG	119LPG	100~1,000 ppmv	1/2	Yellow	Blue or Yellowish green	For use of anti-freezing agent in LP gas	3	10		
Methyl amine <chem>CH3NH2</chem>	227S	1~20	1	Pale purple	Pale yellow	Industrial hygiene	3	10	NH ₃ , Other amines	10 (J) 5 (A)
N-Methyl aniline <chem>C6H5NHCH3</chem>	105SD	0.5~6	2	Pale purple	Pale yellow	Acid acceptor, solvent	3	10	Amines	0.5 (A)
Methyl bromide (Bromomethane) <chem>CH3Br</chem>	157SA	10~500	1	White	Reddish orange	Insect fumigation for mills, warehouses, ships, vaults, freight cars; concentration control in granary fumigation	3	2~5	Ethylene dibromide, Trichloroethylene, Tetrachloroethylene or Chloroform (50), Cl ₂ , Br ₂ or NO ₂ (1), Dichloromethane (500)	1 (J.A) 5 (B)
	157SB	[2~80] 1~25 0.4~10	① 2 4	White	Yellow		3	2~5	Halogens, Halogenated hydrocarbons, Hexane (200)	
	157SD	8.8~22 0.5~10 0.1~0.5	1/2 ① 3	White	Purple		1	2~5		
	157JS	3~70 g/m ³	1/2	Yellow	Brown		2	2~10		
Methyl cellosolve (Ethylene glycol monomethyl ether) (2-Methoxyethanol) <chem>CH3OCH2CH2OH</chem>	190U	5~500	3	Yellow	Pale blue	Organic solvent treating	2	10	Paraffin hydrocarbons (over C ₃), Alcohols, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons, Esters	5 (J.B) 0.1 (A)
Methyl cellosolve acetate <chem>CH3CO2CH2CH2OCH3</chem>	190U	3~120	3	Yellow	Pale blue		2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	5 (J.A)
Methyl chloroform (1,1,1-Trichloroethane) <chem>CH3CCl3</chem>	160S	[30~400] 15~200	① 2	White	Reddish orange	Metal decreasing & cleaning, extraction of oils & fats, paints industry, industrial hygiene	3	2~5	Halogens, Halogenated hydrocarbons	200 (J) 350 (A) 100 (B)
Methyl cyclohexane <chem>C6H11CH3</chem>	113SB	100~1,600	1	Orange	Yellowish green	Cellulose solvent	2	10	Paraffin, Aromatic hydrocarbons, Alcohols (6%), Ketones (6%), Esters (6%)	400 (J.A)
Methyl cyclohexanol <chem>CH3C6H10OH</chem>	199U	5~200	3	Yellow	Pale blue	Mfg. Imbricating oil & liquor, industrial hygiene	2	10	Alcohols	50 (J.A.B)
Methyl cyclohexanone <chem>CH3C6H9O</chem>	198U	2~100	3	Yellow	Pale blue	Industrial hygiene	2	10	Alcohols	50 (J.A.B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					

Methyl ethyl ketone (2-Butanone) <chem>CH3COC2H5</chem>	122SA	1.0~5.0% 0.05~2.2%	1/2 1	Orange Dark brown	Process control, synthetic resins, solvent recovery control & fire hazard detection in paint industry & extraction of oils, fats, natural resins, waxes; cleaning & decreasing of metal surface, denaturation of alcohol	3	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons (0.5%)	200 (J.A.B)
	139SB	0.01~1.4%	2	Orange Brownish green	Other organic gases or vapours except Halogenated hydrocarbons (50), Acetylene (3%), Propane (0.2%)	3	10		
	139U	20~1,500	1	Yellow Pale blue	Other Esters, Ketones, Alcohols, Aromatic hydrocarbons, Halogenated hydrocarbons, Paraffin hydrocarbons	2	10		
Methyl iodide (Iodomethane) <chem>CH3I</chem>	176S	[4~40] 2~20	② 4	Yellow Dark brown	(Suspected carcinogen in humans)	1.5	2~5	H ₂ S (7), n-Hexane (500), Acetone (700), Benzene (2), Toluene (2), Xylene (2), Halogenated hydrocarbons	2 (A.B)
	176UH	500~15,000	1/2	Yellowish orange Brownish green	Used for wood fumigation	3	10		
	122SA	0.01~0.6%	3	Orange Dark brown	Solvent forgums, resins, nitrocellulose	3	10	Alcohols, Other Ketones, Aromatic hydrocarbons, Esters, Halogenated hydrocarbons	
Methyl isobutyl ketone (Isopropyl acetone) <chem>CH3COH2CH(CH3)2</chem>	155U	5~300	1	Yellow Pale blue	Industrial hygiene	2	10	Alcohols, Esters, Aliphatic hydrocarbons (over C ₃), Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	50 (J.B) 20 (A)
	245UH	200~10,000	1	Yellowish orange Pale green	Used for wood fumigation	3	10		
	245UM	25~1,500 [10~600]	1/2 ①	Pale yellow Pale blue		1	10		
Methyl mercaptan (Methanethiol) <chem>CH3SH</chem>	164SA	5~140	1	White Reddish yellow	Pesticides, fungicides, plastics, Atmospheric pollution survey, concentration control of odorant	2	10	Cl ₂ (0.2), Methyl sulphide (1), Ethyl mercaptan, Acetylene, CO, Acetylene, H ₂ S	0.5 (A.B)
	164SH	50~1,000	1	Pale yellow Orange		3	10	H ₂ S (650), NO ₂ (1,000), Cl ₂ (1/3 × CH ₃ SH*)	
	130U	1~10 [0.5~5]	1/2 ①	Pale yellow Pink		2	10	Arsine, Hydrogen selenide, H ₂ S, HCN	
Methyl methacrylate <chem>CH2=C(CH3)CO2CH3</chem>	184S	10~160	1	Yellow Pale blue	Pigment, adhesive, paintings	2	10	Esters, Ketones, Alcohols, Aromatic hydrocarbons	50 (A.B)
Methyl propyl ketone <chem>CH3CO(CH2)2CH3</chem>	139U	20~1,500	1	Pale blue Industrial hygiene		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons, Paraffin hydrocarbons	
Methyl styrene <chem>CH3C6H4CH=CH2</chem>	193S	10~500	1	White Yellow	Synthetic resin	3	10	Styrene	50 (A)
Monoethanol amine (2-Aminoethanol) <chem>HOC2H4NH2</chem>	224SA	[1~50] 0.5~25	① 2	Pink Pale purple	Pesticide, solvent, abuent	2	10	Other Amines, NH ₃ , Hydrazine	3 (J.A) 1 (B)
Morpholine <chem>C4H9NO</chem>	105SD	2~22	1	Pale purple Pale yellow	Solvent; rubber accelerator	3	10	Amines	20 (A) 10 (B)
Naphthalene <chem>C10H8</chem>	153U	10~100	1	Pale yellow Pale blue	Industrial hygiene	1	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	10 (A)
Nickel carbonyl (Nickel tetracarbonyl) <chem>Ni(CO)4</chem>	129	20~700	1	Pale yellow Dark purple	Waste gas analysis	1/2	10	Arsine, Iron carbonyl, Mercury vapour, H ₂ S or SO ₂ (10), CO (1,000)	0.001 (J) 0.05 (A)
Nitric acid vapour <chem>HNO3</chem>	233S	[2~20] 1~10	① 2	Pale yellow Purple	Industrial hygiene	1	10	HF (8) or NO ₂ (50), HCl	2 (J.A)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Nitrogen dioxide NO ₂	117SA	20~1,000	1	White	Yellowish orange	Arc welding, acid dipping, garage (diesel exhaust): waste gas analysis in sulphuric & nitric acid dipping of metal products	3	10	Cl ₂ , Br ₂ , I ₂ or Ozone (5), NO (10)	3 (A)
	117SB	0.5~30.0	2	White	Yellowish orange		1	10	Cl ₂ , Br ₂ , or I ₂ (2), NO (15)	
	117SD	0.1~1.0	3	White	Pale purple		1.5	2 × 5	O ₃ (2), SO ₂ (7), Cl ₂ (3)	
Nitrogen oxide and dioxide -separately measurable NO & NO ₂ Concentration chart method	174A	NO; 10~300	1	White	Yellowish orange	Exhaust gas analysis	2	5	Cl ₂ (1)	25 (NO) (A) 3 (NO ₂) (A)
	174B	NO ₂ ; 1~40			Pale yellowish orange	Flue gas analysis (with hollow glass tubes)	2	2 × 5		
	175SA	20~250	1	White	Yellow	Exhaust gas analysis	1	10	SO ₂ (100), HCl (1,000)	
Nitrogen oxides NO + NO ₂	175U	1~30 [0.5~15]	1/2 ①	White	Pale purple	Industrial hygiene	3	10	H ₂ S (5), HCl (500)	3 (NO ₂) (A)
	175SH	100~2,500	1	White	Yellow	Exhaust gas analysis	2	10	HCl (500)	
	111U	10~160 5~80	1/2 ①	Yellow	Brown		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
Organic gas checker	186		1	Orange	Black or Dark green		3	10	H ₂ S (10)	
Oxygen O ₂	159SA	2~24%	1/2	White	Brown	Oxygen deficiency in underground or closed vessel, tunnels, mines	2	5	CO ₂ (5%), H ₂ S (2%), NO ₂ (2%), SO ₂ (2%)	
	159SB	2~24%	1/2	White	Brown	In the area where the danger of gas explosion exists	2	5		
Oxygen-Non-heating Type O ₂	159SC	[3~24% 1.5~3%]	1/2 1	Black	White	Oxygen deficiency in underground or closed vessels, tunnels and mines	2	2 × 5		
Oxygen + Carbon dioxide -separation measurement O ₂ & CO ₂	281S	O ₂ ; 2~10%	1	White	Brown	Combustion control	1.5	2 × 5	(CO ₂) 5000 (J.A.B)	
		CO ₂ ; 1~20%		Pink	Yellow					
Ozone O ₃	182SA	100~1,000 [50~500]	1/2 ①	Dark blue	Yellow		2	10	Cl ₂ , NO ₂	0.1 (J) 0.05 (A)
	182SB	10~100 [5~50]	1/2 ①	Blue	Pale yellow	Process control	2	10	NO ₂ (10)	
	182U	0.15~3.0 [0.05~1.0] 0.025~0.5	1 ③ 6	Blue	White	Air pollution analysis, industrial hygiene	2	10	NO ₂ (0.5), Cl ₂ (10), Oxidant	
Pentane	CH ₃ (CH ₂) ₃ CH ₃	50~1,000	1	Orange	Yellowish green	Industrial hygiene	2	10	Paraffin hydrocarbons, Aromatic hydrocarbons (over C ₃), Alcohols (6%), Ketones (6%), Esters (6%)	300 (J) 600 (A.B)
Pentyl acetate (Amyl acetate) CH ₃ CO ₂ (CH ₂) ₄ CH ₃	210U	10~200	3	Pale yellow	Pale blue (over 20ppm) Dark brown (less than 20ppm)	Material of Acrylic resin, industrial hygiene	2	10	Alcohols, Esters, Ketones, Aliphatic hydrocarbons, Aromatic hydrocarbons	100 (J) 50 (A.B)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Pentyl amine CH ₃ (CH ₂) ₃ CH ₂ NH ₂	105SD	2~22	1	Pale purple	Pale yellow	Dye; insecticide; synthetic detergent; corrosion inhibitor; medicine; petrol additive	3	10	Amines	
Phenol C ₆ H ₅ OH	183U	0.5~25.0	2	Pale yellow	Pale brown	Industrial hygiene	2	10	NH ₃ (200), Aliphatic amines (50), Phenols (2.5), Aromatic amines (50)	5 (J.A) 2 (B)
Phosgene (Carbonyl chloride) COCl ₂	146S	[0.5~20] 0.1~4.0	① 5	White	Red	Leakage detection in mfg. dyes, chemicals, industrial hygiene	1	10	Cl ₂ (5), HCl (10), NO ₂ (100), SO ₂ (0.2%)	0.1 (J.A) 0.02 (B)
Phosphine in acetylene PH ₃	121SA**	20~800	1	Pale blue	Reddish purple	Impurity test of calcium carbide & acetylene	3	10	Arsine or H ₂ S (10)	
	121SB**	5~90	1	Pale blue	Yellowish brown		3	10		
Phosphine PH ₃	121SC	40~1,400 [20~700]	1/2 ①	White	Yellow	Concentration control in fumigation of tobacco leaves & cereals, doping gas analysis in mfg. semiconductor, industrial hygiene	3	10	Arsine (30), Hydrogen selenide (50), H ₂ S (40)	0.3 (J.A) 0.1 (B)
	121SD	1~20.0 [0.5~10.0] 0.25~5.0	1/2 ① 2	Pale orange	Brownish purple		1	10	NH ₃ , (60), Arsine, Hydrogen selenide, Nickel carbonyl	
	121SG	50~150	1	White	Yellow		3	10	H ₂ Se	
	121SH	200~3,200 [100~1,600]	1/2 ①	White	Orange		3	10	NO ₂ , H ₂ S, SO ₂	
	121SS	400~6,000 [200~3,000]	1/2 ①	White	Orange		3	10	Hydrogen cyanide(3%), Ammonia(0.6%)	
	121U	[0.1~2.0] 0.05~1.0	① 2	Pale yellow	Pink	Industrial hygiene, semiconductor manufacturing process	2	10	Hydrogen selenide, Mercaptans, H ₂ S, HCN, SO ₂ , Arsine	
α-Pinene C ₁₀ H ₁₆	158S	20~300	1	White	Yellow	Materials for perfume and materia medica	3	10	Methanol (0.35%), Ethanol (0.18%), Ethyl acetate (700), Butyl acetate (700), Butadiene (5), Formaldehyde (15), Acetaldehyde (350), Acrylonitrile (400)	
1-Propanol CH ₃ CH ₂ CH ₂ OH	190U	20~300	3	Yellow	Pale blue		2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	100 (A)
Propane C ₃ H ₈	125SA	0.02~0.5%	1	Orange	Brown	Mfg. city gas, fire hazard detection	2	10	Toluene, Hexane, Trichloroethylene	1,000 (A)
Propionic acid CH ₃ CH ₂ COOH	216S	3~50	1	Pale pink	Yellow	Mfg. propionate and ester; Nickel-electro plating solution; ester perfume; artificial flavour; medicine; cellulose solvent	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid*), Cl ₂ (5)	10 (A.B)
Propyl acetate CH ₃ CO ₂ (CH ₂) ₂ CH ₃	139SB	0.01~1.4%	2	Orange	Brownish green	Fire hazard detection in paints industry & painting, mfg. flavours & perfumes	3	10	Other organic gases or vapours except Halogenated hydrocarbons, Acetylene (3%), Propane (0.2%)	200 (J.A.B)
	151U	20~1,000	1	Pale yellow	Dark brown	Paints industry & painting, mfg. flavours & perfumes, industrial hygiene	2	10	Alcohols, Esters, Ketones, paraffin hydrocarbons, Aromatic hydrocarbons	

※※Interfered by coexistence more than parenthesized rate.

※※Air flow control orifice is required.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Propyl amine <chem>CH3CH2CH2NH2</chem>	105SD	蘸 1~20	1	Pale purple	Pale yellow	Analgesic	3	10	Amines	
Propylene <chem>CH2=CHCH3</chem>	185S	50~ 1,000	1	Yellow	Dark blue	Leakage detection	2	10	CO (200), Acetylene (50), Ethylene, H ₂ S (50)	500 (A)
Propylene glycol <chem>CH3CHOHCH2OH</chem>	122SC	蘸 5~50	1	Pale pink	Yellow	Mfg. moisturizer, lubricant, emulsify, anti-freeze	2	2~5	Aldehydes, SO ₂ , H ₂ S	
Propylene oxide (1,2-Epoxypropane) <chem>CH3CH(O)CH2</chem>	122SC	蘸 3~70	1	Pale pink	Yellow	Leakage detection in preparation of propylene oxide	2	2~5	Aldehydes, SO ₂ , H ₂ S	2 (A) 5 (B)
	163SA	1.0~ 5.0% 0.05~ 3.0%	1/2 ①	Orange	Dark brown		3	10	Aromatic hydrocarbons, Esters, Ketones, Alcohols, Halogenated hydrocarbons	
n-Propyl mercaptan <chem>CH2CH2OH2SH</chem>	130U	1~10 0.5~5	1/2 ①	Pale yellow	Pink	Industrial hygiene	2	10	Arsine, Hydrogen selenide, H ₂ S, HCN	
Pyridine <chem>C6H5N</chem>	105SD	蘸 0.5~10	1	Pale purple	Pale yellow	Alcohol denaturant; solvent; paint; medical care; dye of fiber	3	10	Amines	1 (A) 5 (B)
Silane <chem>SiH4</chem>	240S	蘸 1~50 0.5~25	① 2	Yellow	Red	Industrial hygiene, semiconductor manufacturing process	1	10	PH ₃ (20), Arsine (50), Disilane (2), Diborane (20)	100 (J) 0.5 (B)
Styrene (Vinyl benzene) <chem>C6H5CH=CH2</chem>	158S	蘸 5~300 2.5~150	① 2	White	Yellow	Fire hazard detection in synthetic rubber, resin & plastic industry	3	10	Methanol (0.35%), Ethanol (0.18%), Ethyl acetate (700), Butyl acetate (700), Butadiene (5), Formaldehyde (15), Acetaldehyde (350), Acrylonitrile (400)	20 (J.A) 100 (B)
	158SB	蘸 2~100 1~50	② 4	White	Yellow	3	2~5			
Sulphur dioxide <chem>SO2</chem>	103SA	0.1~ 3.0%	1	Yellow	Blue	Process control in sulphuric acid paint (chemical mfg.)	3	10	H ₂ S (400)	2 (A)
	103SB	0.02~ 0.3%	1	White	Orange	Process control in sulphuric ore calcination	3	10	H ₂ S (100)	
	103SC	20~300	1	Purple	Yellow	Metal refining, mfg. sulphuric acid & nitric acid; waste gas analysis	2	10	Cl ₂ (1/5 × SO ₂ *), NO ₂ (100), H ₂ S (100 × SO ₂ *)	
	103SD	1~60	1	Pink	Yellow	Metal refining, mfg. sulphuric acid & nitric acid, industrial hygiene	3	10	NO ₂ (1 × SO ₂ *), Cl ₂ (2 × SO ₂ *)	
	103SE	0.5~10 0.25~5	① 2	Pink	Yellow	Metal refining, mfg. sulphuric acid & nitric acid; waste gas analysis	1	10	NO ₂ , HCl	
Sulphur dioxide-in flue gas <chem>SO2</chem>	103SF	0.02~ 0.3%	1	White	Orange	Flue gas analysis in heat power plant (with moisture control tube)	3	2~5	H ₂ S (100)	
Sulphur dioxide-in carbon-dioxide <chem>SO2</chem>	103SG	0.5~25 0.1~3	① 4	Blue purple	White	Process control in beverage industry	3	10	NO ₂ (0.5), H ₂ S (0.5), NH ₃ (1)	
Sulphuric acid <chem>H2SO4</chem>	244U	0.5~5 mg/m ³	5	Yellow	Pink	Petrochemical industry, industrial hygiene	2	10	HCl, HF, NO ₂ , Nitric acid, C ₁₂	0.2mg/m ³ (A)

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					
Tetrachloroethylene (Perchloroethylene) <chem>Cl2C=CCl2</chem>	135SA	10~300 5~150	1/2 ①	White	Red	Dry cleaning, metal decreasing, paints industry & painting; solvent recovery control	2	10	Vinyl chloride, HCl, 1, 2-Dichloroethylene, Trichloroethylene, Cl ₂	25 (A) 50 (B)
	135SB	1~10 0.2~2.0	① 4	Pale orange	Blueish purple			1	10	Trichloroethylene, 1, 2-Dichloroethylene or HCl (2), Vinyl chloride (40)
	135SG	0.2~ 2.0% 0.1~ 0.2%	① 2	White	Dark brown			2	2~5	Trichloroethylene, 1, 1, 1-Trichloroethane, 1, 2-Dichloroethylene, Vinyl chloride, CO, Aromatic hydrocarbons
	135SM	125~ 1,250 50~500	1/2 ①	Yellow	Red			1	10	1,2-Dichloroethylene(10), Trichloroethylene(10)
Tetraethoxysilane <chem>Si(OC2H5)4</chem>	243U	12.5~ 200 5~80	1 ②	Yellow	Pale blue	Industrial hygiene	3	10	Silane, Phosphine (5), Isopropyl alcohol (7), Trichloroethylene, Tetrachloroethylene, Ethanol (10)	10 (J)
Tetrahydrofuran <chem>CH2CH2 >O CH2CH2</chem>	102SA	蘸 2.0~ 5.0% 0.2~ 3.0%	1/2 ①	Orange	Dark brown	Fire hazard detection in paints industry & painting petrochemical industry, Industrial hygiene	3	10	Alcohols, Esters, Ketones, Aromatic hydrocarbon	50 (J.A.B)
	162U	20~400	1	Pale Yellow	Pale blue	2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons, Halogenated hydrocarbons		
Tetrahydrothiophen <chem>C4H8S</chem>	190U	蘸 4~100	3	Yellow	Pale blue	Odorant	2	10	Alcohols, Esters, Paraffin hydrocarbons, Aromatic hydrocarbons, Ketones, Halogenated hydrocarbons	
Toluene (Methyl benzene) <chem>C6H5CH3</chem>	124SA	10~500	1	White	Brown	Solvent recovery control & fire hazard detection in paints industry & painting; rubber & plastics industry; mfg. dyes, printing inks, adhesives, industrial hygiene	3	10	Benzene (10), Xylene (50), Methanol (1%), Hexane (0.1%), Ethyl benzene (10)	20 (J.A) 50 (B)
	124SB	2~100	1	White	Brown	Solvent recovery control	3	10	Aromatic hydrocarbons, Hexane (high conc.)	
	124SH	100~ 3,000	1	White	Dark brown	Solvent recovery control	2	10	Benzene, Xylene, Ethyl benzene, Hexane, Methanol	
o-Toluidine <chem>C6H4(CH3)(NH2)</chem>	105SD	蘸 2~22	1	Pale purple	Pale yellow	Dye; printing	3	10	Amines	1 (J) 2 (A)
p-Toluidine <chem>C6H4(CH3)(NH2)</chem>	105SD	蘸 2~20	1	Pale purple	Pale yellow	Analytical reagent; dye	3	10	Amines	2 (A)
1, 1, 2-Trichloroethane <chem>Cl2CHCH2Cl</chem>	236SA	10~100	1	White	Purple	Industrial hygiene	1	3~5	Nitrogen oxides, Halogens, Halogenated hydrocarbons, Hexane (100)	10 (J.A)
Trichloroethylene <chem>Cl2C=CCl</chem>	134SA	10~300 5~150	1/2 ①	White	Red	Metal decreasing & cleaning; dry cleaning & insect fumigation of clothes; mfg. printing inks, industrial hygiene	2	10	Vinyl chloride, HCl, 1, 2-Dichloroethylene, Tetrachloroethylene, Cl ₂	10 (J.A) 100 (B)
	134SB	2.3~36.8 1~16 0.2~3.2	1/2 ① 4	Pale orange	Blueish purple			1	10	Tetrachloroethylene, 1, 2-Dichloroethylene or HCl (2), Vinyl chloride (20)
	134SG	0.05~ 2.0%	1	White	Yellow		2	10	Tetrachloroethylene, 1, 1, 1-Trichloroethane, 1, 2-Dichloroethylene, Vinyl chloride, CO, Aromatic hydrocarbons	

※Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V. (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					

Triethyl amine (C ₂ H ₅) ₃ N	213S	2~20 [1~10]	1/2 ①	Pale purple	Pale yellow	Mfg. emulsifier, organic solvent, waterproofing agent, dyestuff, surface activator and agricultural chemicals etc. industrial hygiene	3	10	NH ₃ , Other Amines	1 (A) 2 (B)
Trimethyl amine (CH ₃) ₃ N	222S	1~20	1	Pale purple	Pale yellow	Industrial hygiene	3	10	NH ₃ , Other Amines	5 (A) 2 (B)
	105SE	5~100 2.5~50 0.5~10	1/2 ① 5	Pale purple	Pale yellow		3	10	Sulphur dioxide, Chlorine, Amines	
1, 2, 4-Trimethyl benzene C ₆ H ₃ (CH ₃) ₃	111U 薫	20~250	1	Yellow	Brown		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	25 (J.A.B)
2, 2, 4-Trimethyl pentane (CH ₃) ₃ CCH ₂ C(CH ₃) ₂	113SB 薫	200~ 4,000 100~ 1,400	1/2 ①	Orange	Yellowish green	Automotive fuel	2	10	Paraffin, Aromatic hydrocarbons, Alcohols (6%), Ketones (6%), Esters (6%)	
n-Undecane CH ₃ (CH ₂) ₉ CH ₃	111U 薫	10~140	1	Yellow	Brown		2	10	Alcohols, Esters, Ketones, Aromatic hydrocarbons	
n-Valeric acid CH ₃ (CH ₂) ₃ CO ₂ H	216S 薫	3~70	1	Pale pink	Yellow	Artificial flavour; perfume; lubricant; plasticizer, medicine	3	10	SO ₂ (1/20 × Acetic acid*), NO ₂ (10), HCl (2 × Acetic acid), Cl ₂ (5)	
Vinyl acetate CH ₃ CO ₂ CH=CH ₂	237S	10~120 5~60	① 2	Yellow	Pale blue	Process control in Acetylene plant	2	10	Ethylene (150), Alcohols, Ethers, Esters.	10 (A)
Vinyl chloride (Chloroethylene) CH ₂ =CHCl	132SA	0.05~ 1.0%	1	Brownish orange	Brownish green	Leakage & fire hazard detection in PVC plant, industrial hygiene	3	10	Acetylene (3%), Propane (0.2%), Other organic gases or vapors except Halogenated hydrocarbons (50)	2.5 (J) 1 (A) 3 (B)
	132SB	5~500	1	White	Reddish orange	Process control, leakage detection and fire hazard detection in synthetic rubber & plastics industry	1.5	2 × 5	Cl ₂ , HCl, Other Halogens, Halogenated hydrocarbons	
	132SC	0.4~ 12.0 [0.2~6.0] 0.1~3.0	1 ② 4	Greenish yellow	Pink	Industrial hygiene	3	2 × 5	HCl (2,000), Acetylene (1%), Ethylene (300), Cl ₂ (10 × Vinyl chloride*)	
Water vapour H ₂ O	177SA	1.7~33.8 mg/L	1	Yellowish green	Purple	Industrial hygiene, process control	3	10	Methanol (0.3%), Ethanol (0.3%), Ethyl acetate (0.3%), Acetone (0.5%), NH ₃ (0.2%), NO ₂ (0.2%)	
	177U	0.05~2.0 mg/L	1	Greenish yellow	Blue (over 0.6mg/l) Yellowish green (less than 0.6mg/l)	Industrial hygiene, process control	3	10	Alcohols	
	177UL	3~80 LB/MMCF	1	Yellow	Blue (over 40LB/MMCF) Yellowish green (below 40LB/MMCF)	Petrochemical industry, industrial hygiene	3	10		
Water vapour -ultra low range H ₂ O	177UR	2~12 LB/MMCF	2	Yellow	Yellowish green	Petrochemical industry, industrial hygiene	3	10		

*Interfered by coexistence more than parenthesized rate.

Gas to be measured (Synonym) Chemical Formula	Tube No.	Mea- suring Range (ppm)	No. of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes/ box	Interferences (ppm)	T.L.V. (ppm) J: JPN A: U.S.A B: U.K.
				Original	Stain					

Xylene (Dimethyl benzene) C ₆ H ₄ (CH ₃) ₂	143SA	5~1,000	2	White	Brown	Leakage & fire hazard detection in phthalic acid plant; paints industry & painting mfg. dyes, adhesives, printing inks, cleaning fluids, industrial hygiene	1.5	10	Benzene or Toluene (5), Methanol (1%), Hexane (0.1%)	50 (J.B) 100 (A)
---	-------	---------	---	-------	-------	---	-----	----	--	---------------------

*Interfered by coexistence more than parenthesized rate.

Notes: (1) Only compounds commonly occurring and affecting accurate readings are listed. Interferences are normally in proportion to the ratio of interfering compound to the substance to be measured. The figure listed after the interferences are "ppm" unless otherwise indicated.
(2) 2 × 5 in the Q'ty of tube/box column means 5 detector tubes and 5 pretreat tubes.
(3) 3 × 5 in the Q'ty of tube/box column means 5 detector tubes and 10 (in total) pretreat tubes.
(4) TLV.(J): Occupational Exposure Limits (OELs) recommended in Journal of Occupational Health issued by the Japan Society for Occupational Health.
TLV.(A): Threshold Limit Values for chemical Substances in the Work environment Adopted by ACGIH (American Conference of Governmental Industrial Hygienists) with Intended Change for 2009.
TLV. (B): Occupational Exposure Limit listed on guidance Note EH40/2007 from the Health and Safety Executive in U.K.

SUBSTANCES TO BE MEASURED BY USING CONVERSION CHARTS

Conversion charts are available, upon request, for the following listed chemical substances using existing detector tubes within the Kitagawa range.

These conversion charts are for use in a temperature of 20°C (68°F). Other conditions, such as different temperatures, humidity and coexisting gases, are not confirmed. Please specify the name of the substance to be measured together with the tube number when ordering.

SUBSTANCE	CHEMICAL FORMULA	MEASURING RANGE	USING TUBE
Allyl chloride	CH ₂ CHCH ₂ Cl	1-40 ppm	132SC
Benzyl chloride	C ₆ H ₅ CH ₂ Cl	1-16 ppm	132SC
Bromochloromethane	CH ₂ BrCl	5-400 ppm	157SB
Bromoform	CHBr ₃	0.5-20 ppm	157SB
1-Bromopropane	CH ₃ CH ₂ CH ₂ Br	10-500 ppm	157SA
1-Bromopropane	CH ₃ CH ₂ CH ₂ Br	5-80 ppm	157SB
2-Bromopropane	(CH ₃) ₂ CHBr	10-500 ppm	157SA
2-Bromopropane	(CH ₃) ₂ CHBr	5-80 ppm	157SB
m-Chlorotoluene	C ₆ H ₄ Cl(CH ₃)	0.5-10 ppm	132SC
o-Chlorotoluene	CIC ₆ H ₄ CH ₃	1-80 ppm	132SC
p-Chlorotoluene	CIC ₆ H ₄ CH ₃	1-50 ppm	132SC
p-Cymene	CH ₃ C ₆ H ₄ CH(CH ₃) ₂	20-200 ppm	102SD
Dibromomethane	CH ₂ Br ₂	2-40 ppm	157SB
1,1-Dichloroethylene	CH ₂ =CCl ₂	1-22 ppm	132SC
1,2-Dichloroethylene	CH ₃ CHClCH ₂ Cl	20-250 ppm	157SB
1,2-Dichloropropane	CH ₃ CHClCH ₂ Cl	20-250 ppm	157SB
1,3-Dichloropropene	CICH ₂ CH ₂ CH ₂ Cl	1-10 ppm	132SC
Disilane	Si ₂ H ₆	1-50 ppm	240S
Ethylene chlorohydrine	CICH ₂ CH ₂ OH	5-300 ppm	119U
Ethyl bromide	C ₂ H ₅ Br	5-400 ppm	157SB
Iodine	I ₂	0.7-42 ppm	117SD
Isopropyl amine	(CH ₃) ₂ CHNH ₂	1-12 ppm	222S
Methyl butyl ketone	CH ₃ (CH ₂) ₃ COCH ₃	5-80 ppm	237S
Methyl isothiocyanate	C ₂ H ₃ NS	10-200 ppm	111U
Mineral turpentine	—	4-200 ppm	111U
Trichlorotoluene	C ₆ H ₅ CCl ₃	0.2-4 ppm	132SC
* Benzaldehyde	C ₆ H ₅ CHO	5-70 ppm	190U
* 1,1,2,2-Tetrachloroethane	CHCl ₂ CHCl ₂	20-60 ppm	236SA

*N.B. For the above three substances, the conversion chart and the measuring range may vary with each manufacturing lot.

SPECIAL APPLICATION TUBES

COMPRESSED BREATHING AIR TEST SYSTEM

The system is designed to measure impurities in compressed breathing air such as in scuba and rescue cylinders, as well as from an outlet of an air-charge compressor.

● Compressed Breathing Air Test Tubes

Substances to be measured	Tube No.	Measuring Range (ppm)	Sampling Time (minutes)	Colour Change		Shelf Life (year)	Q'ty of tubes / box
				Original	Stain		
Carbon monoxide (CO)	600SP	5~100 [2.5~5]	2 4	Yellow	Dark brown	2	10
Carbon dioxide (CO ₂)	601SP	100~3,000	2	Purplish blue	Pale pink	2	10
Oil mist	602SP	0.3~5mg/m ³	25	Yellow	Pale blue	2	10
Water vapour (H ₂ O)	603SPA	20~160mg/m ³	1	Yellow	Yellowish green or blue	3	10
Oxygen (O ₂)	※604SP	2~24%	1	White	Brown	2	10

※ A 50mL plastic syringe and a 1m vinyl tube are optional accessories for 604SP.

● Model P-41R Compressed Breathing Air Sampling Kit




Composition

1 Control assembly	1 set
(Including an adapter with W22-14RH Female thread for rescue and on-land cylinders)	1 pc
2 International fitting yoke (For a scuba cylinder)	1 pc
3 Gas detector tube (an extra option)	1 pc
4 Tube protector	1 pc
5 Tip cutter for Gas detector tube	1 pc
6 Wrench	1 pc
7 Digital stopwatch	1 pc
8 Carrying case (Aluminum)	1 pc
Instruction manual	1 set

Optional Accessories for 604SP only

- 1 50mL plastic syringe
- 2 1m vinyl tube

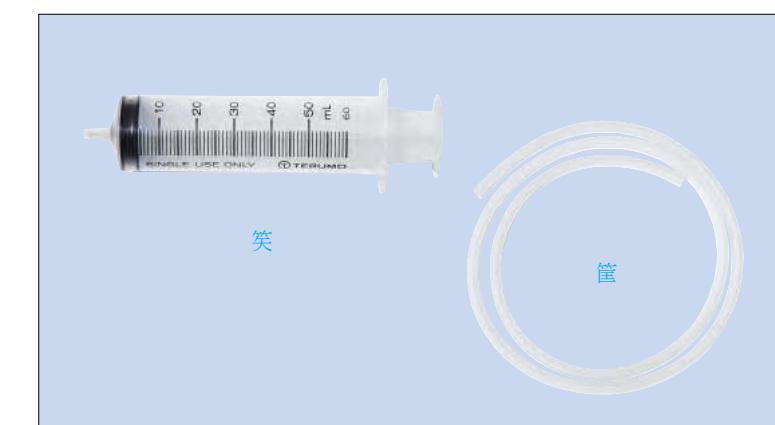

INORGANIC GAS/ORGANIC GAS QUALITATIVE DETECTOR TUBES

Our new qualitative-analysis-detector-tube system is composed of only two (2) kinds of gas detector tubes which contain different reagents at multiple sections in the tubes.
Only these tubes are able to detect various kinds of gases.
Although the main purpose of this system is qualitative analysis, simple quantitative analysis of the gases is also possible.

● Inorganic Gas Qualitative Detector Tube (Tube No 131)

Gas →	To pump	Section	Original
		A	Pale purple
		B	Reddish purple
		C	White
		D	White
		E	Yellow

Specifications

筒 Tube/box : 10 tubes (10-time use)
筒 Pump stroke : 1 (100mL)
筒 Sampling time : 20 seconds
筒 Shelf life : 1 year

Substances to be detected and the detectable gas concentration limit (Unit: ppm) (※:Organic gas)

NH₃ (5) SO₂ (10) HCl (20) Acetic acid (15)※ CO (10) Acetylene (10)※
Amines (50) Cl₂ (5) NO₂ (5) H₂S (10) PH₃ (2) Methyl mercaptan (10)※

Non-discoloration confirmed substances

HCN Ethylene CO₂ NO

● Organic Gas Qualitative Detector Tube (Tube No 186B)

1) Gas →	1) To pump	Section	Original
		A	Orange
		B	White
		C	Yellow
		D	Yellow

1) "A" side sampling 2) "D" side sampling 2) Gas ←

The "A" side sampling at the arrow mark direction and the "D" side sampling at an inverse direction of the arrow mark are required by using two fresh tubes for one-time analysis.

Specifications

筒 Tube/box : 10 tubes (5-time use)
筒 Pump stroke : 1 (100mL) +1 (100mL)
筒 Sampling time : 30+30 seconds
筒 Shelf life : 2 years

Substances to be detected and the detectable gas concentration limit (Unit: ppm) (※:Inorganic gas)

Hexane (10)	Acetylene (100)	Ethylene oxide (100)	CS ₂ (100)
Propane (100)	Gasoline (0.1 mg/L)	Methyl mercaptan (20)	Phenol (10)
Butane (10)	Kerosine (0.1 mg/L)	Toluene (200)	Cresol (20)
Pentane (10)	Benzene (100)	Ethyl benzene (400)	Aniline (50)
Heptane (10)	Acetone (500)	Xylene (1,000)	Ethyl amine (100)
1,1,1-Trichloroethane (1,000)	Methyl ethyl ketone (100)	Styrene (100)	Arsine (20)※
Trichloroethylene (100)	Methyl isobutyl ketone (100)	Methyl alcohol (100)	H ₂ S (10)※
Tetrachloroethylene (100)	Formaldehyde (10)	1-Butanol (100)	CO (100)※
Vinyl chloride (10)	Acetaldehyde (100)	Isopropyl alcohol (500)	
Ethylene (10)	Ethyl acetate (500)	Ethyl cellosolve (100)	
Butadiene (1,000)	Butyl acetate (100)	Tetrahydrofuran (100)	

Non-discoloration confirmed substances

CH₃Br Acetic acid Methane CCl₄ Pyridine

DETECTOR TUBES USED FOR DISSOLVED SUBSTANCES IN SOLUTION

Tube No.	Substance	Chemical Formula	Measuring Range (ppm)	Sampling		Sampling Method	Colour Change		Typical Applications	Shelf Life (year)	Use of detector kit
				Volume (mL)	Time (sec)		Original	Stain			
200SA	Sulphide ion S ²⁻		2~1,000	over 5.0	180	Immersion method	White	Dark brown	Waste water analysis in pulp & paper mills, petroleum refineries, other chemical industries, waste disposal plants, water treatment plant	1	None needed
200SB			0.5~10	over 5.0	150	Immersion method	White	Pale brown		2	
201SA	Chloride ion Cl ⁻		10~2,000	over 5.0	90	Immersion method	Brown	Pale yellow	Detection of salt water in marine lubricating oils, impurity test, testing portable water supply	3	None needed
201SB			3~200	over 5.0	90	Immersion method	Brown	White		2	
203S	Copper ion Cu ²⁺		1~100mg/L	over 5.0	60	Direct sampling method	White	Orange	Waste water analysis in pulp & paper mills, petroleum refineries, other chemical industries, waste disposal plants, water treatment, school hygiene	1	Rubber ball (As extra)
204S	Cyanide ion CN ⁻		0.2~5	over 5.0	120 to 240	Direct sampling method	White	Blue	KCN & NaCN in water	2	
205SL	Salinity	NaCl	0.01~0.8%	over 5.0	30	Suction method	Brown	White	Detection of salt water in marine lubricating oils, impurity test, testing portable water supply	2	Filter paper/ Rubber ball (As extra)
234SA	Free residual chlorine	Cl ₂	0.4~5	over 5.0	180	Immersion method	White	Purple		2	
77S	Water in solvent	H ₂ O	10~160mg/L 50~400mg/L	Position C D	10 10	Direct sampling method	Yellow	Blueish purple	Detection of water content in solvent	2	Rubber bulb

Quantity of tubes per box:10 tubes each.

SPECIAL APPLICATION TUBES

INDOOR AIR POLLUTANTS MEASUREMENT DETECTOR TUBE

Tube No.	Gas to be measured	Chemical Formula	Measuring Range (ppm)	Sampling		Colour Change		Typical Applications	Shelf Life (year)	
				Flow Rate (mL/min)	Time (minutes)	Original	Stain			
710	Formaldehyde	HCHO	0.01~0.12 0.04~0.48	300 300	30 10	Yellowish orange	Pink	Indoor air pollutants	1	
710A			0.05~1.0 0.10~2.0	30	30 15	Yellowish orange	Pink		1	
713			0.01~0.50	350	10	Yellowish orange	Pink		1	
721	Toluene	C ₆ H ₅ CH ₃	0.05~1.0	200	20	White	Brown		1	
721蘸	Ethyl benzene	C ₆ H ₅ (C ₂ H ₅) ₂	0.05~1.0						1	
721蘸	Xylene	C ₆ H ₄ (CH ₃) ₂	0.1~1.4						1	
730	p-Dichlorobenzene	p-C ₆ H ₄ Cl ₂	0.01~0.40	200	15	Yellow	Reddish purple		1	

Quantity of tubes per box: 20 tubes (Tube No. 721, 730: 2 × 10 tubes).

Model S-23E or S-27 Air Sampler is required for above tubes (See page 35).

ATMOSPHERIC ENVIRONMENT MEASUREMENT DETECTOR TUBE

Tube No.	Gas to be measured	Chemical Formula	Measuring Range (ppm)	Sampling		Colour Change		Typical Applications	Shelf Life (year)
				Flow Rate (mL/min)	Time (minutes)	Original	Stain		
740	Nitrogen dioxide	NO ₂	0.01~0.1 0.02~0.2	200 200	20 10	White	Reddish purple	Atmospheric environment measurement	2
750	Trichloroethylene	Cl ₂ C=CHCl	30~400µg/m ³ 69~920µg/m ³	100	30 15	Yellowish orange	Purple red		1
760	Tetrachloroethylene	Cl ₂ C=CCl ₂	30~400µg/m ³ 69~920µg/m ³	100	30 15	Yellowish orange	Purple red		1

Quantity of tubes per box: 10 tubes each.

Model S-23E or S-27 Air Sampler is required for above tubes (See page 35).

TIME WEIGHTED AVERAGE TUBES

Tube No.	Gas to be measured	Chemical Formula	Measuring Range (ppm)	Sampling		Colour Change		Typical Applications	Shelf Life (year)	T.L.V T.W.A (ppm) J: JPN A: U.S.A B: U.K.
				Flow Rate (mL/min)	Time (hours)	Original	Stain			
500	Carbon monoxide	CO	5~400	6	0.5~8	White	Brown ringed	Industrial hygiene	3	50 (J.B) 25 (A)
501	Ammonia	NH ₃	5~200	8	1~8	Purple	Yellow		3	25 (J.A.B)
502	Hydrogen Sulphide	H ₂ S	1~20	6	1~8	White	Brown		1	5 (J.A.B)
503	Sulphur dioxide	SO ₂	0.5~20	6	1~8	Purple	Yellow		3	2 (A.B)
504	Toluene	C ₆ H ₅ CH ₃	20~200	10	1~8	White	Brown		3	50 (J.A.B)

Quantity of tubes per box: 10 tubes each.

TLV-TWA(The Threshold Limit Value-Time Weighted Average): The time-weighted average concentration for an 8-hour workday and a 40-hour workweek, to which nearly all workers may be repeatedly exposed, day after day, without adverse effect.

SPECIAL APPLICATION TUBES

SUPER-HIGH SENSITIVITY DETECTOR TUBES FOR AMMONIA IN ART GALLERIES/MUSEUMS AND CLEAN ROOMS

Tube No.	Gas to be measured	Chemical Formula	Measuring Range	Sampling		Colour Change		Typical Applications	Shelf Life (year)
				Flow Rate (mL/min)	Time (hours)	Original	Stain		
900NHH	Ammonia	NH ₃	10~80µg/m ³	400	60	Pale purple	Pale yellow	For Cultural-property protection in art galleries and museums	2
901NHL	Ammonia	NH ₃	1~12µg/m ³	400	60	Pale purple	Pale yellow	For clean room monitoring of semiconductor industries	2
910	Organic acid	Acetic acid CH ₂ = CHCOOH	10~400µg/m ³ 25~ 1000µg/m ³	200 200	60 30	Pale pink	Pale yellow	For Cultural-property protection in art galleries and museums	3
		Formic acid HCOOH	20~800µg/m ³	200	60				

Quantity of tubes per box: 10 tubes each.

Model S-23E or S-27 Air Sampler is required for above tubes.

CRIMINAL INVESTIGATION DETECTOR TUBE


Tube No.	Detector Tube	Chemical Formula	Measuring Range (ppm)	No.of Pump Strokes	Colour Change		Typical Applications	Shelf Life (year)	Q'ty of tubes / box
					Original	Stain			
290P	Detector tube for crime investigation			1	White	[Gasoline]Brown/dark brown/orange [Kerosene]Pink/dark brown	Discriminate Gasoline and/or Kerosene	1	10
290P ^鑑	Detector tube for crime investigation			1	White	[Gasoline]Yellow/brown/greenish brown [Kerosene]Brown/pale pink/pale brown		1	10
290CN	Hydrogen cyanide in blood	HCN	2~30mg/L	1	Yellow	Red	Screening test for cause identification of one's death	2	2 × 5
290CO	Carbon monoxide in blood	CO	20~90%COHb	1	Yellow	Blackish brown		1.5	2 × 5
290EA	Ethyl alcohol in blood	C ₂ H ₅ OH	0.2~2.0mg/mL	3	Pink	Pale blue		1	2 × 5
290PQ	Paraquat dichloride in blood-qualitative	CH ₃ (C ₆ H ₄ N) ₂ CH ₃ Cl ₂			White	Blue		3	10

COLLECTION TUBES

■ CHARCOAL TUBE (Tube No. 800B)

Useful for sampling organic solvent vapours in air with personal sampler for industrial hygiene
(Conformed to NIOSH requirements)

Two Sections System 100mg + 50mg

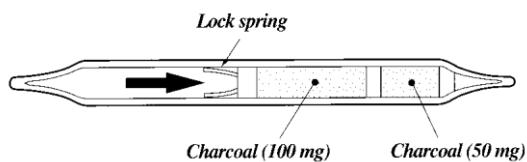


※Quantity of tubes per box: 20 tubes

■ SILICA-GEL TUBE (Tube No. 801)

Useful for sampling polar solvent vapours which cannot be collected by Charcoal tube such as Methanol

One Section System 300mg with Breakthrough indicator

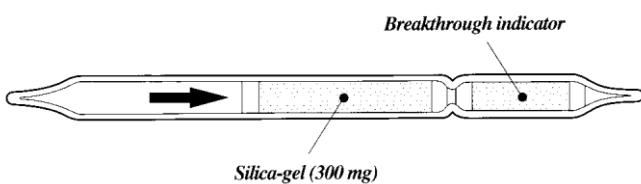


※Quantity of tubes per box: 10 tubes

NEW

■ DNPH-TREATED SILICA GEL SORBENT TUBE For sampling for airborne levels of Aldehydes and Ketones

Ideal for analysis by High Performance Liquid Chromatography (HPLC). The special sorbent tube contains silica gel crystals treated with 2,4-Dinitrophenylhydrazine (DNPH), designed to collect Formaldehyde, MEK and other Aldehydes and Ketones in indoor and industrial atmospheres, when used in conjunction with an air sampling pump.

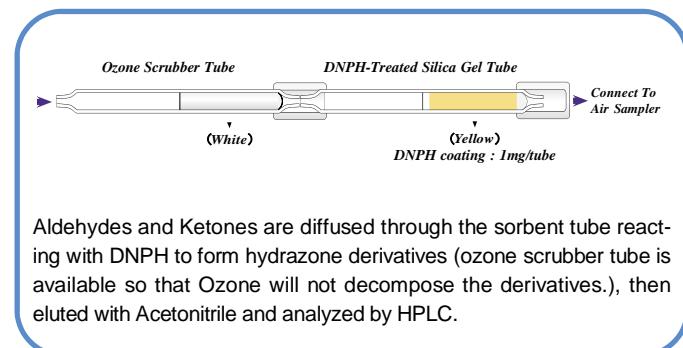

Aldehydes and Ketones are diffused through the sorbent tube reacting with DNPH to form hydrazone derivatives (ozone scrubber tube is available so that Ozone will not decompose the derivatives.), then eluted with Acetonitrile and analyzed by HPLC.

CHARACTERISTICS

- Stable and low blank value enable high performance analysis.
- Determine low concentration quantity with low sampling volume.
- High sampling volume.
e.g. max. sampling flow rate (200mL/min) enables collection of 10ppm HCHO at 30 minutes.
- No breakthrough from coexisting Aldehydes.
- Identical condition can be applied for all sampling, from low to high concentration.
- Ozone scrubber removes 1ppm O₃.

SPECIAL DETECTORS & ACCESSORIES

■ Model SH-5N/SH-10N Rubber Extension Hose

Available in 5 metre (SH-5N) and 10 metre (SH-10N) lengths, for remote sampling with aspirating pump Model AP-20. Useful for drawing samples from inaccessible and confined areas such as manholes, sumps, ship holds, warehouses, tanks, process pipes, etc.



■ Model SR-200R Extension Sampling Rod

Used with aspirating pump Model AP-20, for vertical and horizontal gas detection in unreachable positions of up to 2 metres.




■ Model AS-1/AS-2 Air Flow Indicator

To determine velocity and direction of air flow; Model AS-1 for spot tests, Model AS-2 for continuous measurement and No. 301 for tubes only (10 tubes/box).



■ Model AS-3 Extension Air Flow Indicator


Consists of dry batteries and pump attached on the handle of the extension rod for continuous air flow check up to 2 metres (Non-explosion proof type).

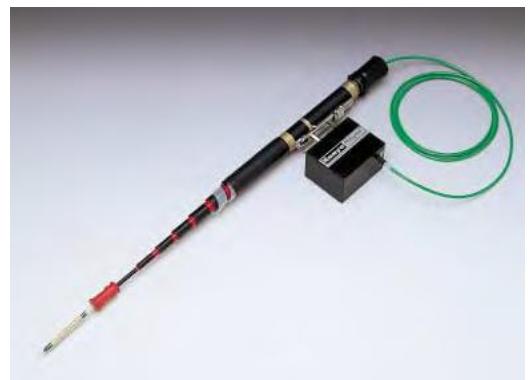

■ Model SFH-01 Hot-Air Probe holder



This is to fix the connection between AP-20 and SF-40.
It is available up to 600 degrees centigrade.

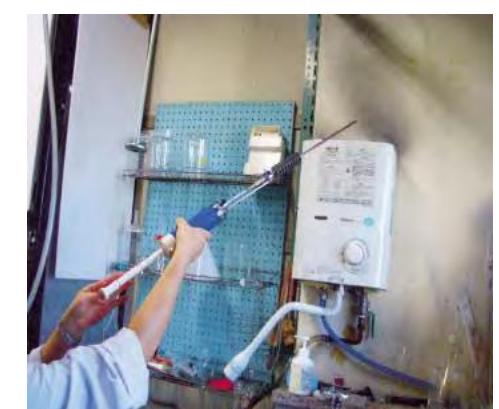

SPECIAL DETECTORS & ACCESSORIES

■ Model SA-10 One-hand Operation Switch

For one handed operation whilst working on a ladder, in high places or narrow spaces, sampling is available by pushing down the switch knob. (Can be attached to Model AP-1 and 400 pumps)



■ Model SF-40 Hot-air Probe

Where hot sample is measured like emission gas from gas fittings or automobiles, this probe at 40 cm in length is available.



■ Model SPG-1 Sampling Probe for gases in Soil

Chlorinated organic solvents in soil can be sampled through this probe at 1 metre in length. Digging tools to make a hole in soil are not included.



- Applied aspirating pump: Model AP-20
- Applied detector tubes:
- 1) No.134SA
Trichloroethylene:5-300ppm
- 2) No.134SB
Trichloroethylene:1-16ppm
- 3) No.135SA
Tetrachloroethylene:5-300ppm
- 4) No.135SB
Tetrachloroethylene:1-10ppm
- 5) No.160S
1,1,1-Trichloroethane:15-400ppm
(Methyl chloroform)

■ Model B-191 Tip Cutter

Tips can be cut from the detector tubes and collected within this clear plastic container to prevent scattering.



■ Model SS-100 100ml Glass Syringe

This is available for the measurement of high temperature gas or for diluting high concentration gas.



■ Model P-10FG Flue Gas Sampler

Composed of a ribbon heater, stainless steel sampling probe, suction pump, Model AP-20 aspirating pump and carrying case. No. 174B (NO & NO₂), No. 175SA (NO_x), No. 175SH (NO_x), No. 103SF (SO₂), No. 106SA (CO), No. 126SH (CO₂), No. 173SA (HCl) and No. 159SC (O₂) tubes are useful with this sampler.



SPECIAL DETECTORS & ACCESSORIES

■ Model S-23E Air Sampler



■ Model S-27 Air Sampler



SPECIFICATIONS

Model	S-23E
Air pump	Diaphragm
Maximum suction pressure	More than 40 kPa (At full load)
Gas sampling control mode	Time mode : Automatic pump stop by timer presetting (Accumulated volume indication available) Accumulated mode : Automatic pump stop by accumulated volume (Suctioning time indication available)
Display	Digital display by LCD
Measuring and display at momentary flow	Flow setting by needle valve Measuring range : 0.00-1.10L Minimum display : 0.01L
Measuring and display at sampling flow	Measuring range : 0.00-9999L Minimum display : 0.01L
Time setting range (Revolution)	Measuring range : 00.00-99.59 (hour, minute) Minimum display : 1min. Remaining time display: Display subtraction/addition (Preset value when shipped from factory is subtraction)
Operating temperature	0-40°C
Power supply voltage	AC100V 50/60Hz (AC220V as extra option)
Main body dimensions	130 (W) x 270 (H) x 283 (D) mm
Main body weight	Approx. 4kg
Height for measuring	930mm(without detector tube and connecting tube) 1,000-1,050mm (with detector tube)

SPECIFICATIONS

Model	S-27
Air pump	Double diaphragm
Range of flow volume setting	0.100-0.500L/min.
Range of flow volume display	0.000-0.750L/min
Time setting / display	Year / Month / Date / Time
Built-in flow meter	Mass-flow sensor
Operating temperature / humidity	0-40°C, 10-90%RH (without water condensation)
Power supply	Lithium Ion secondary battery (option) Alkaline AA size battery AC adaptor (option)
Size	145 (w) x 95 (H) x 67 (D)mm (without projection part)
Weight	0.65kgs (including Alkaline AA size battery)
Standard accessory	Model DB-10N Battery unit for Alkaline battery Suction holder for low flow volume

Options
 Model LI-10N Battery unit
 Model CX-200 Tripod
 Model QC-10N Quick charger
 Suction inlet set
 Model PA-1203 AC adaptor
 Model VFE-3 Filter element (5pcs/set)
 Soft case
 Communication cable with software

■ P-50/UFO-

Harmful Gas Detector for Disaster Relief



During a disaster, the rescue team may be at risk from invisible toxic gases. The "Harmful Gas Detector for Disaster Relief" can measure toxic gas levels easily and quickly at the disaster scene.

Composition of P-50

- Gas Aspirating Pump (AP-20)
- Rubber extension hose (5m)
- Tip Cutter (B-191)
- Container for used detector tubes
- Accessories
- Carrying case
- Instruction manual
- Gas qualitative flow chart (Organic gas)
- Gas qualitative flow chart (Inorganic gas)
- 131
- 186B

Composition of UFO-

20 sets of gas detector tubes as following are added to P-50 as standard.

- For Inorganic gases
 - Ammonia 105SB
 - Hydrogen sulphide 120SB
 - Carbon monoxide 106SA
 - Hydrogen cyanide 112SB
 - Carbon disulphide 141SA
 - Carbon dioxide 126SA
 - Chlorine 109SB
 - Sulphur dioxide 103SD
 - Hydrogen chloride 173SB
 - Hydrogen selenide 167S
 - Phosgene 146S
 - Hydrogen fluoride 156S
 - Nitro-oxide compound 174A
 - Nitric acid vapour 233S
- For Organic gases
 - Toluene 124SA
 - Acetylene 101S
 - Methyl alcohol 119SA
 - Ethylene oxide 122SA
 - Methyl amine 227S
 - Choroform 152S

SPECIAL DETECTORS & ACCESSORIES

■ MODEL TWS-201 TUBE WARMING SYSTEM


The MODEL TWS-201 TUBE WARMING SYSTEM is designed for measuring gases and vapours in low temperature conditions (down to -20°C).

When the inside of the bag of MODEL TWS-201 TUBE WARMING SYSTEM is heated with the hot packs, gas detector tubes are brought up to their operating temperature.

The system enables gases and vapours to be measured to the same accuracy as in ordinary temperature conditions.

Enables usage of the Detector Tube System in cold conditions

Operation

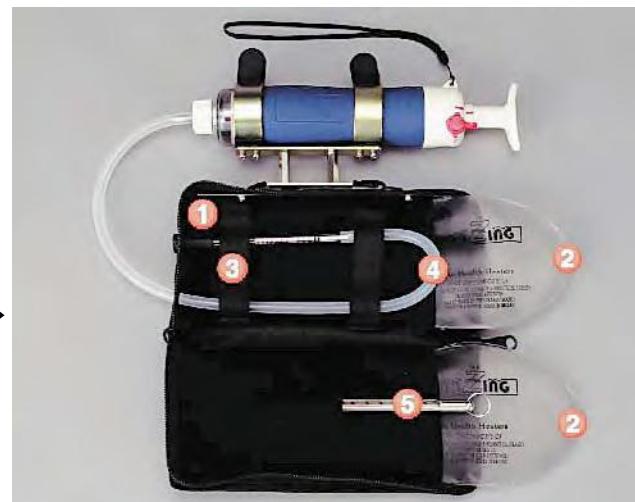

Composition

- 1 Bag
- 2 Hot pack (x2)
- 3 Detector tube holder
- 4 Connection tube
- 5 Thermometer

■ DETECTOR SCOPE, DS-110W



- DS-110W is compact, light-weighted, and magnifies the scale of the gas detector tube for the easy check.
- DS-110W has the lighting function by the dry battery, and it employs the energy-saving method that means the light turns on when the gas detector is inserted and turns off when the gas detector tube is removed.

Lighting method : LED x 2 pcs
 Power supply : "AA" size dry battery x 2 pcs
 Continual usage time : Approx. 70 minutes (with Alkaline dry battery)
 Weight : Approx. 115g (Not including dry batteries)

SPECIAL DETECTORS & ACCESSORIES

Chlorine solvent which is used in the industry of cleaning and semiconductor causes an environmental problem to the public water system and underground water. It is easy to measure the concentration of solvent in the drainage by measuring the head space gas by P-20 and P-24AP.

■ Model P-20 Simple Measurement Set for Chlorocarbons in Drainage



P-20 includes : Resinous gas collector, one collecting bottle and thermometer

■ Model P-24AP Simple Measurement Set for Chlorocarbons in Drainage



P-24AP includes : AP-20 Aspirating pump, four collecting bottles, thermometer and carrying case

Available gas detector tubes with Model P-20 and P-24AP

Chemical name	Detector tube used	Measuring range
Dichloromethane	180S	2 ~ 54 mg/L
Carbon tetrachloride	147S	0.1 ~ 1.0 mg/L
1,2-Dichloroethane	230SA	0.3 ~ 3.7 mg/L
1,1-Dichloroethylene	132SC	0.01 ~ 0.27 mg/L
cis-1,2-Dichloroethylene	145S	0.1 ~ 2.7 mg/L
1,1,1-Trichloroethane	160S	0.67 ~ 9.0 mg/L
1,1,2-Trichloroethane	236SA	1.4 ~ 5.6 mg/L
Trichloroethylene	134SB	0.03 ~ 0.47 mg/L
Tetrachloroethylene	135SB	0.03 ~ 0.27 mg/L
1,3-Dichloropropene	132SC	0.02 ~ 0.5 mg/L
Benzene	118SC	0.1 ~ 1.5 mg/L

NUMERICAL INDEX OF KITAGAWA DETECTOR TUBES

Tube No.	Detector Tube
77S	Water vapour in solvent
100	Carbon monoxide-length of stain
101S	Acetylene
102SA	Acetone
102SA狡	Tetrahydrofuran
102SC	Acetone
102SD	Acetone
103SA	Sulphur dioxide
103SB	Sulphur dioxide
103SC	Sulphur dioxide
103SD	Sulphur dioxide
103SE	Sulphur dioxide
103SF	Sulphur dioxide-in flue gas
103SG	Sulphur dioxide
104SA	Ethyl alcohol
105SA	Ammonia
105SB	Ammonia
105SC	Ammonia
105SD	Ammonia
105SD狡	Butyl amine
105SD	Cyclohexyl amine
105SD狡	Dibutyl amine
105SD狡	Diisopropyl amine
105SD狡	N,N-Dimethylaniline
105SD狡	Dipropyl amine
105SD狡	n-Methyl aniline
105SD狡	Morpholine
105SD狡	Pentyl amine
105SD狡	Propyl amine
105SD狡	Pyridine
105SD狡	o-Tolidine
105SD狡	p-Tolidine
105SE	Ammonia
105SE	Trimethyl amine
105SH	Ammonia
105SM	Ammonia
106B	Carbon monoxide-in presence of ethylene, colour intensity
106C	Carbon monoxide-in presence of ethylene and/or nitrogen oxides, colour intensity
106S	Carbon monoxide
106SA	Carbon monoxide
106SC	Carbon monoxide
106SH	Carbon monoxide
106SS	Carbon monoxide
106UH	Carbon monoxide-ultra high range
107SA	Diethyl ether
107U	Diethyl ether
108B	Ethylene-colour intensity
108SA	Ethylene-high range
108SC	Ethylene
109SA	Chlorine
109SB	Chlorine
109U	Chlorine
110S	Gasoline
111SA	Ethyl acetate
111SA狡	Methyl acetate
111U	Ethyl acetate
111U	Isopropyl acetate
111U狡	tert-Butanol
111U狡	Butyl ether
111U狡	Butyl methacrylate

Tube No.	Detector Tube
111U狡	tert-Butyl methyl ether
111U狡	Cumene
111U狡	Cyclohexene
111U狡	Decahydronaphthalene
111U狡	n-Decane
111U狡	Diethyl benzene
111U狡	Ethyl methacrylate
111U狡	Isopropyl ether
111U狡	n-Nonane
111U狡	1,2,4-Trimethyl benzene
111U狡	n-Undecane
112SA	Hydrogen cyanide
112SB	Hydrogen cyanide
112SC	Hydrogen cyanide
113SA	n-Hexane
113SB	n-Hexane
113SB狡	Isobutylene
113SB狡	Methyl cyclohexane
113SB狡	2,2,4-Trimethyl pentane
113SB狡	Heptane
113SB狡	Isobutane
113SB狡	Pentane
113SC	n-Hexane
114	Bromine
115S	Cyclohexane
116	Chlorine dioxide
117SA	Nitrogen dioxide
117SB	Nitrogen dioxide
117SD	Nitrogen dioxide
118SB	Benzene-in presence of gasoline and the other aromatic hydrocarbons
118SC	Benzene
118SD	Benzene
118SE	Benzene-in presence of gasoline and the other aromatic hydrocarbons
119SA	Methyl alcohol
119LPG	Methanol in LPG
119U	Methyl alcohol
119U狡	1,4-Dioxane
120SB	Hydrogen sulphide
120SC	Hydrogen sulphide-in presence of sulphur dioxide
120SD	Hydrogen sulphide
120SE	Hydrogen sulphide
120SF	Hydrogen sulphide
120SH	Hydrogen sulphide
120SM	Hydrogen sulphide
120U	Hydrogen sulphide
120UH	Hydrogen sulphide-ultra high range
120UT	Hydrogen sulphide-ultra high range
121SA	Phosphine in acetylene
121SB	Phosphine in acetylene
121SC	Phosphine
121SD	Phosphine
121SG	Phosphine
121SH	Phosphine-high range
121SS	Phosphine
121U	Phosphine
121U	Arsine
121U	Mercury vapour
122SA	Ethylene oxide
122SA狡	Furan
122SA狡	Isopropyl alcohol
122SA狡	Methyl ethyl ketone

Tube No.	Detector Tube
122SA狡	Methyl isobutyl ketone
122SC	Ethylene oxide
122SC狡	Propylene glycol
122SC狡	Propylene oxide
122SD	Ethylene oxide-low range
122SL	Ethylene oxide
122SM	Ethylene oxide
123S	Dimethyl ether
124SA	Toluene
124SB	Toluene
124SH	Toluene
125SA	Propane
126B	Carbon dioxide
126SA	Carbon dioxide
126SB	Carbon dioxide
126SF	Carbon dioxide
126SG	Carbon dioxide
126SH	Carbon dioxide-extra high range
126UH	Carbon dioxide-ultra high range
128SA	Acrylonitrile
128SB	Acrylonitrile
128SC	Acrylonitrile
128SD	Acrylonitrile
129	Nickel carbonyl
130U	tert-Butyl mercaptan
130U	Ethyl mercaptan
130U	Isopropyl mercaptan
130U	Methyl mercaptan
130U	n-Propyl mercaptan
131	Inorganic gas qualitative detector tube
132SA	Vinyl chloride
132SB	Vinyl chloride
132SC	Vinyl chloride
133A	Acetaldehyde
133SB	Acetaldehyde
134SA	Trichloroethylene
134SB	Trichloroethylene
134SG	Trichloroethylene
135SA	Tetrachloroethylene
135SB	Tetrachloroethylene
135SG	Tetrachloroethylene
135SM	Tetrachloroethylene
136	Acrolein
137U	Hydrogen
138U	Butyl acetate
139SB	Methyl ethyl ketone
139SB狡	Butyl acetate
139SB狡	1,4-Dioxane
139SB狡	Isobutyl acetate
140SA	Phosphine
141SA	Carbon disulphide
141SB	Carbon disulphide
141U	Phosphine
141U	Arsine
142SA	Ethylene oxide
142SA狡	Furan
142SA狡	Isopropyl alcohol
142SA狡	Methyl ethyl ketone
143SA	Propyl acetate
143U	Methyl ethyl ketone
143U	Methyl propyl ketone
143U狡	Diisobutyl ketone
143U狡	Phosgene
144SA	Arsine
144SA	Carbon disulphide
144SB	Carbon disulphide
144U	Phosphine
144U	Mercury vapour
145SA	Xylene
145SA	1,2-Dichloroethylene
146S	Phosgene

150U	Isopropyl alcohol
151U	Propyl acetate
152S	Chloroform
153U	Isobutyl acetate
153U狡	Naphthalene
155U	Methyl isobutyl ketone
156S	Hydrogen fluoride
157JS	Methyl bromide
157SA	Methyl bromide
157SB	Methyl bromide
157SD	Methyl bromide
158S	Styrene
158S狡	Divinyl benzene
158S狡	α-Pinene
158SB	Styrene
159SA	Oxygen
159SB	Oxygen
159SC	Oxygen-Non-heating type
160S	Methyl chloroform
162U	Tetrahydrofuran
163SA	Propylene oxide
164SA	Methyl mercaptan
164SH	Methyl mercaptan
165SA	Ethyl mercaptan
165SB	Ethyl mercaptan
165SB	tert-Butyl mercaptan
166S	Ethylene dibromide
167S	Hydrogen selenide
168SA	1,3-Butadiene
168SB	1,3-Butadiene
168SC	1,3-Butadiene
168SE	1,3-Butadiene
169S	Chloroprene
171SA	Formaldehyde
171SB	Formaldehyde
171SC	Formaldehyde
172S	Chloropicrin
173SA	Hydrogen chloride
173SB	Hydrogen chloride
174A	Nitro-oxide compound
174B	Nitro-oxide compound-in flue gas
175SA	Nitrogen oxides
175SH	Nitrogen oxides
175U	Nitrogen oxides
176S	Methyl iodide
176UH	Methyl iodide
177SA	Water vapour
177U	Water vapour
177UL	Water vapour
177UR	Water vapour-ultra low range
178SB	Chlorobenzene
179S	Ethyl benzene
180S	Dichloromethane
181S	Aniline
182SA	Ozone
182SB	Ozone
182U	Ozone
183U	Cresol
183U	Phenol
184S	Methyl methacrylate
184S狡	Allyl alcohol
185S	Propylene

186B	Organic gas qualitative detector tube
187S	General hydrocarbons
188U	Isopentyl acetate
189U	2-Butanol
190U	Ethyl cellosolve
190U	Methyl cellosolve
190U狡	1-Butanol
190U狡	Butyl cellosolve
190U狡	Diacetone alcohol
190U狡	Ethyl cellosolve acetate
190U狡	Furfural
190U狡	Isoprene
190U狡	Mesityl oxide
190狡	Crotonaldehyde
190狡	Dicyclopentadiene
190狡	Isopropyl cellosolve
190狡	Methyl cellosolve acetate
190狡	1-Propanol
190狡	Tetrahydrothiophene
192S	Epichlorohydrine
193S	Methyl styrene
194S	1,3-Dichloropropane
194S	N,N-Dimethylformamide
197U	Cyclohexanone
197U狡	Isophorone
197U狡	1-Methoxy-2-propanol
198U	Methyl cyclohexanone
199U	Methyl cyclohexanol
200SA	Sulphide ion
200SB	Sulphide ion
201SA	Chloride ion
201SB	Chloride ion